



ARTIST ELITE®

# **4000 & 5000 Series**

## **Professional UHF Wireless Systems**

---

CE 0168 ⓘ

*Installation and Operation*

# Professional UHF Wireless Systems

## Installation and Operation

This device complies with the European R&TTE directive 1999/05/EC. Operation is subject to the condition that this device does not cause harmful interference.

Dispose of exhausted batteries in accordance with local/national regulations. Do not dispose of exhausted batteries in a fire or incinerate.

Remove outer cover in order to access power rating and model number information. (handheld transmitter)

Do not use the body-pack if the antenna shows any signs of damage. (body-pack transmitter)

**CAUTION!** The circuits inside the receiver and transmitter have been precisely adjusted for optimum performance. Do not attempt to open the receiver or transmitter. To do so will void the warranty, and may cause improper operation.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**AVIS**  
RISQUE DE CHOC ÉLECTRIQUE  
NE PAS OUVRIR



To prevent electric shock, do not remove the cover. There are no user-serviceable parts inside. Internal adjustments are for qualified professionals only. Refer all servicing to qualified service personnel.



Pour prévenir un choc électrique, ne pas ouvrir le couvercle. Il n'y a aucune pièces de rechanges à l'intérieur. Tout ajustement interne doit être fait par une personne qualifié seulement. Référez tout réparation au personnel qualifié.

**WARNING: This apparatus must be grounded.**

This product is a safety class 1 product. There must be an uninterruptible safety earth ground from the main power source to the product's AC input. Whenever it is likely that the protection has been impaired, disconnect the power cord until the ground has been restored.

**ATTENTION: Cet appareil doit être mise à la terre.**

Cet appareil est de classe de sûreté 1. Il doit y avoir un ininterrompable de mise à la terre de sécurité provenant de la source principale de courant de l'appareil de l'entrée du courant alternatif. Quand la protection a été affaiblie, débrancher le fil de courant jusqu'à la mise à terre a bien été réétablie.

**WARNING:**

This apparatus shall not be exposed to dripping or splashing.

No objects filled with liquids, such as vases, shall be placed on this apparatus.

Do not install this apparatus in a confined space such as a bookcase or similar unit.

The apparatus should be placed close enough to the AC outlet so that you can easily grasp the power cord plug at any time.



**Warning:** To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

**Attention:** Pour prévenir feu ou choc électrique, ne pas exposé l'appareil à la pluie ou à l'humidité.

**CAUTION:** For continued protection against fire hazard, replace only with same type/rating of fuse.

**AVIS:** Pour poursuivre la protection contre le feu, remplacez la fusible de même type/cote.

**WARNING:** There are some sharp edges inside. To reduce the risk of injury, do not remove cover.

**ATTENTION:** Bord tranchant à l'intérieur. Pour réduire le risque de blessure, ne pas ouvrir le couvercle.

**Notice to individuals *with implanted cardiac pacemakers or AICD devices:***

Any source of RF (radio frequency) energy may interfere with normal functioning of the implanted device. All wireless microphones have low-power transmitters (less than 0.05 watts output) which are unlikely to cause difficulty, especially if they are at least a few inches away. However, since a "body-pack" mic transmitter typically is placed against the body, we suggest attaching it at the belt, rather than in a shirt pocket where it may be immediately adjacent to the medical device. Note also that *any medical-device disruption will cease when the RF transmitting source is turned off.* Please contact your physician or medical-device provider if you have any questions, or experience any problems with the use of this or any other RF equipment.

The systems can be supplied in five frequency bands within the UHF range.

Please note: Frequency usage is different for each country. Your Audio-Technica agent will have all the necessary details on the available legal frequencies for your area.

Band C: 541.500 - 566.375 MHz

Band D: 655.500 - 680.375 MHz

Band E: 795.500 - 820.000 MHz

Band F: 840.125 - 864.875 MHz

For use in China, it is necessary for the user to utilize a CCC certified power cord.

## Contents

<b>Introduction</b> .....	<b>6</b>
System Configurations .....	6
Operating Frequencies .....	7
Receivers .....	7
Multi-channel Systems .....	8
Transmitters .....	8
<b>Receiver Installation</b> .....	<b>8</b>
Location .....	8
Output Connections .....	8
Antennas .....	8
Antenna Power .....	8
Front-mount Antennas .....	9
Headphone Jack .....	9
Power Connections .....	9
“Link” Connections .....	9
Ethernet Connections (AEW-R5200 only) .....	10
<b>Receiver Controls and Functions</b> .....	<b>10</b>
AEW-R5200 Front Panel Controls and Functions .....	10
AEW-R5200 Rear Panel Controls and Functions .....	11
AEW-R4100 Front Panel Controls and Functions .....	12
AEW-R4100 Rear Panel Controls and Functions .....	13
<b>Common Receiver Controls</b> .....	<b>14</b>
Power On/Off .....	14
Level Alert Light (LED) .....	14
LCD Window .....	14
Mode/Set Button .....	14
Up/Down Arrow Buttons .....	14
<b>Changing Receiver Settings</b> .....	<b>14</b>
Menu Mode .....	14
Edit Mode .....	14
Quitting and Saving Changes .....	14
<b>Receiver Controls and Functions</b> .....	<b>15</b>
IntelliScan™ Channel Assignment System .....	15
Receiver Locks .....	15
Antenna Power .....	15
Digital Tone Lock™ Squelch .....	15
Meter Hold .....	16
Using “PRESET” Store and Recall .....	16
<b>Receiver Functions (Chart)</b> .....	<b>17</b>
<b>Transmitter Controls and Functions</b> .....	<b>18</b>
LCD Window .....	18
Power/Mute Button .....	18
Power On/Off .....	18
Mute On/Off .....	18
Power/Mute Locks .....	19
Audio Input Selector (UniPak™ Transmitter) .....	19
Setting Audio Input Level .....	19
Preset/Default Settings .....	20

<b>UniPak™ Transmitter Functions (Chart)</b> .....	<b>21</b>
<b>Handheld Transmitter Functions (Chart)</b> .....	<b>21</b>
<b>Transmitter Setup</b> .....	<b>22</b>
Battery Selection and Installation .....	22
Battery Condition Indicator .....	22
UniPak™ Transmitter Input Connection .....	23
UniPak™ Transmitter Antenna .....	23
Handheld Transmitter Antenna.....	23
UniPak™ Transmitter Mounting Clip .....	23
<b>System Operation</b> .....	<b>24</b>
Selecting/Setting Receiver Frequency .....	24
Setting Receiver Frequency Manually .....	24
Setting Receiver Frequency Using IntelliScan™ .....	25
Setting Transmitter Frequency .....	26
Setting Transmitter Audio Input Level.....	26
RF Power Adjustment .....	26
RF Interference .....	26
<b>Specifications</b> .....	<b>27</b>
<b>Optional System Accessories</b> .....	<b>28</b>
<b>Artist Elite Wireless Operating Frequencies/Groups</b> .....	<b>29</b>
<b>Serial Number Log</b> .....	<b>42</b>
<b>Warranty Statement</b> .....	<b>44</b>

### *Guide to Illustrations*

Receiver Location (Figure A).....	8
Connecting Linked Receivers (Figure B).....	9
AEW-R5200 Front Panel Controls and Functions (Figure C) .....	10
AEW-R5200 Rear Panel Controls and Functions (Figure D) .....	11
AEW-R4100 Front Panel Controls and Functions (Figure E) .....	12
AEW-R4100 Rear Panel Controls and Functions (Figure F) .....	13
Receiver LCD Window (Figure G).....	13
Transmitter LCD Window (Figure H).....	18
UniPak™ Transmitter Exterior (Figure J).....	18
Handheld Transmitter Exterior (Figure K) .....	18
UniPak™ Transmitter Battery Door (Figure L).....	22
Installing Batteries in UniPak™ Transmitter (Figure M).....	22
Opening Handheld Transmitter (Figure N) .....	22
Handheld Transmitter Interior Controls (Figure P).....	22
Installing Batteries in Handheld Transmitter (Figure Q).....	22
Receiver Frequency/Group Display (Figure R) .....	25

## Introduction

Thank you for choosing an Audio-Technica professional wireless system. You have joined thousands of other satisfied customers who have chosen our products because of their quality, performance and reliability. This Audio-Technica wireless microphone system is the successful result of years of design and manufacturing experience.

Recent advances in the quality and sophistication of professional live-sound systems have been nothing short of revolutionary. Tours, clubs, broadcast events, corporate facilities and worship venues sound better than ever, utilizing better system design and better components in the audio chain.

That's why Audio-Technica has been partnering with industry professionals on the front line of this revolution – the top touring companies, award show designers, FOH and monitor engineers, audio consultants and artists – to learn what it takes to make the best-sounding, most reliable and consistent microphones for the live-sound industry.

We listened carefully. Then, we applied this knowledge to the creation of the Artist Elite™ line of high-performance microphones and wireless systems. Our ultimate design goal was this: Each model must extend the performance of a sound system, not limit it.

### Artist Elite Receivers

Artist Elite 4000 Series and 5000 Series wireless systems by Audio-Technica share a range of transmitters in common, both body-pack and handheld types. The difference between the two series is simply in the choice of receiver:

- 4000 Series**     AEW-R4100 half-rack single receiver with multi-unit, multi-channel control linking.
- 5000 Series**     AEW-R5200 full-rack independent dual receiver with multi-unit, multi-channel control linking, plus Ethernet computer-control connection, and software for graphical user interface.

### IntelliScan™ Channel Assignment System

The IntelliScan™ automatic channel assignment system, provided on both the 4000 and 5000 Series receivers, greatly simplifies the selection of usable frequencies in a multi-channel wireless system. The receivers are first linked together with included communication cables. The selected “Master” receiver then “knows” how many total channels it is looking for. It can scan the available frequencies, checking for local interference sources, selecting a group of channels that will all work together (using a built-in frequency plan), and automatically setting the other receivers accordingly. Once this procedure is completed, it's just a matter of setting the transmitter frequencies to match those of the receivers.

### Artist Elite Transmitters

Transmitter models in the Artist Elite Series include:

- **AEW-T1000**     UniPak™ body-pack transmitter
- **AEW-T3300**     Handheld mic/transmitter with AEW-C3300 cardioid condenser capsule
- **AEW-T4100**     Handheld mic/transmitter with AEW-C4100 cardioid dynamic capsule
- **AEW-T5400**     Handheld mic/transmitter with AEW-C5400 cardioid condenser capsule
- **AEW-T6100**     Handheld mic/transmitter with AEW-C6100 hypercardioid dynamic capsule

All components in the 4000/5000 Series may be used together in a variety of unit combinations and system configurations to create extremely flexible and powerful solutions for a variety of applications.

## Operating Frequencies

4000/5000 Series systems and components operate on approximately 200 frequencies for each 25MHz-wide UHF frequency band. See frequency listing on page 3:

For simplicity, model numbers used throughout this manual will reference only the basic model number.

Artist Elite Series components feature an advanced digital Tone Lock™ squelch system and unique Dual Comander design (patents pending). As a result, Artist Elite Series transmitters and receivers must be used together in Tx-Rx pairs and should not be mixed with components from other Audio-Technica wireless systems, or with those of other manufacturers.

All Artist Elite Series components feature soft-touch controls for quick, easy access to a formidable range of functions; an LCD information display in each unit provides convenient visual indication of unit settings and operation. Digital data sent by the transmitters is available for display on the receivers.

## Receivers

Both Artist Elite receiver models feature True Diversity reception. Two antennas feed two completely independent RF sections on the same frequency; automatic logic circuitry continuously compares and selects the superior received signal, providing better sound quality and reducing the possibility of interference and dropouts.

Both receivers offer a choice of approximately 200 operating frequencies in a 25 MHz-wide UHF frequency range. AEW wireless are designed with a channel spacing that exceeds the transmitters' maximum modulation deviation, so even adjacent channels are actually usable, unlike some other wireless systems on the market. (For operation of two or more systems at the same time, please consult the multi-channel plan on page 30, or use the IntelliScan function for frequency selection.)

**AEW-R4100:** A single synthesized UHF receiver in a half-rack 1U case. Its power supply operates on 100–240V 50/60 Hz AC power worldwide with the appropriate IEC-type power input cordset.

**AEW-R5200:** Two independent synthesized UHF receiver channels in a full-rack 1U case. Its common power supply operates on 100–240V 50/60 Hz AC power worldwide with the appropriate IEC-type power input cordset. In addition, a "pass-through" AC outlet on each receiver with included AC jumper cable permits daisy-chaining of an entire AEW-R5200 receiver stack, freeing AC outlets for other equipment.

## Multi-channel Systems

Artist Elite systems provide extensive monitoring and control facilities. Transmitter data, in addition to being available at the transmitter, is conveyed in digital form to and displayed on the associated receiver.

**Linked systems:** Both Artist Elite receivers provide linking jacks and cables. AEW-R4100 and AEW-R5200 receivers may be combined in linked multi-channel systems, if desired.

**Ethernet-based monitoring and control (AEW-R5200):** Some wireless systems on the market offer remote control/monitoring of the receiver via a serial interface, but the Audio-Technica AEW-R5200 receiver takes this a significant step further by including control over IP using standard networking protocol and Ethernet interfacing. This permits receivers in a system to be integrated, monitored and controlled from a single computer in real-time. And not only can an individual channel of an individual receiver be examined and its settings modified: if the transmitter on that channel is activated, thanks to the digital data link, data from the associated transmitter can also be monitored.

Because standard control over IP is used, Ethernet-connected AEW systems can range from a single laptop controlling a free-standing multi-channel system, to local area network-based systems, to systems controlled via the Internet, even from great distances. Complete setup and operating information for computer-connected AEW systems will be found in the separate Computer Interface manual provided with AEW-R5200 receivers and 5000 Series systems.

## Transmitters

The versatile AEW-T1000 UniPak™ body-pack transmitter features a metal case and includes field-replaceable helical and flexible-wire antennas. It has both low- and high-impedance inputs plus a bias connection, for use with dynamic and electret condenser microphones, as well as Hi-Z instrument pickups. In addition to its programmable functions, the transmitter includes a three-position sliding control cover to limit access, if desired, to only the Power/Mute button, or to no controls at all, as appropriate for the application and/or user.

The handheld microphone/transmitters feature metal-body construction. Four models are available, incorporating a variety of capsules from the Artist Elite™ wired-microphone series created for professional live-sound venues.

All Artist Elite Series transmitters use two 1.5V AA batteries for economical operation and wide availability. The receiver and both transmitters have “fuel gauge” battery condition indicators with low-battery warnings.

Please note that in multiple-system applications there must be a transmitter-receiver combination set to a separate frequency for each input desired (only one transmitter for each receiver). Because the wireless frequencies are within UHF TV frequency bands, only certain operating frequencies may be usable in a particular geographic area. Also, only certain of the available operating frequencies may be used together. Operating frequencies and multi-channel suggestions will be found on pages 29-30. (Use of the IntelliScan channel assignment system will determine and set appropriate frequencies automatically.)

## Receiver Installation

### Location

For best operation the receiver should be at least 3 ft. (1 m) above the ground and at least 3 ft. away from a wall or metal surface to minimize reflections. The transmitter should be at least 3 ft. from the receiver, as shown in Figure A. Keep antennas away from noise sources such as digital equipment, motors, automobiles and neon lights, as well as away from large metal objects.

### Output Connections

There are two audio outputs on the back panel: an XLR Mic Output (25 mV) and a 1/4" (6.3 mm) phone jack Instrument Output (50 mV). The two isolated audio outputs permit simultaneous feeds to two different inputs.

**AEW-R4100:** This receiver offers a balanced XLR Mic jack and an unbalanced Instrument 1/4" TS phone jack. Output levels of both are adjusted by the rear-panel Attenuator (ATTN) switch.

**AEW-R5200:** Since there are two independent channels of receiver in the AEW-R5200, there are two sets of output jacks. All audio outputs on the AEW-R5200 are transformer-isolated and balanced. The ground connections of both outputs on each receiver channel may be interrupted (“lifted”) by use of their associated Ground Lift switch. This permits feeding mixers with different ground levels without an additional external splitter. The Instrument output is a balanced 1/4" TRS jack with “audio +” on the Tip, “audio -” on the Ring and ground (shield) on the Sleeve. The rear-panel Attenuator (ATTN) switch for each receiver channel adjusts levels of both outputs in its channel.

Use the appropriate shielded audio cable for connections between the receiver and the input(s) of the mixer or other equipment.

### Antennas


Attach a pair of UHF antennas to the antenna input jacks. The antennas are normally positioned in the shape of a “V” (both 45° from vertical) for best reception. In addition to rotating at the connector, the included half-wave antennas pivot from straight to right-angle.

Antennas can be remotely located from the receiver. However, due to signal loss in cables at UHF frequencies, use the lowest-loss RF cables practical for any cable runs over 25 feet. RG8-type is a good choice. Use only copper-shielded cable, not CATV-type foil-shielded wire. Audio-Technica offers auxiliary antennas, and quality RF cables in four lengths; see the Optional System Accessories section on page 28.

### Antenna Power

The antenna input jacks also can provide +12V DC output on their center pins to power inline RF devices. A maximum of 20 mA can be drawn from each of the jacks. While an accidental short-circuit will not harm the internal 12V supply, make certain that an antenna cable shield does not contact the center conductor. Antenna Power (“ANT.PWR”) is selected (switched on or off) from the LCD menu. (On the AEW-R5200, Antenna Power will be found in the menu on Channel 1 only.)

Figure A

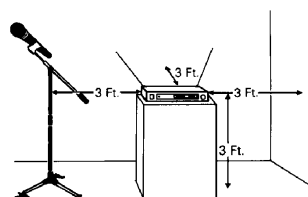

## Receiver Installation (Continued)

### Front-mount Antennas

**AEW-R4100:** Provision has been made to move the antenna jacks from the rear to the front of the receiver. However, because this involves opening the receiver case and exposing AC power circuitry, instructions are not included in this manual. A qualified service technician must perform this modification.

**AEW-R5200:** BNC-to-BNC connectors and jumper cables are included with the unit to permit mounting antennas on the front panel.

- BNC-BNC through-panel connectors: Remove the nut and lock-washer from each connector. Install the connectors **from the front** into the two panel holes. Note that the flat on the threaded section must be aligned with the flat in each panel hole. Secure each connector from the back with its lock-washer and nut, tightening the nut firmly.
- BNC-BNC cable jumpers: Connect the jumpers to the rear antenna jacks first; then attach them to the BNC connectors on the front panel. Make certain the bayonet twist-rings are **fully latched** on the connectors at both ends.

### Headphone Jack

A headphone jack on the front panel provides monitoring of the receiver's output. The 1/4" TRS jack is intended for use with stereo headphones. The Phones Level control affects the headphone jack only. Note: On an operating unit, **be careful not to press the Power switch accidentally when inserting a headphone jack or adjusting the headphone level.** In addition to interrupting receiver operation, even a momentary loss of power to a single unit within a linked multi-channel system will cause the loss of linking connection to the affected receiver and all those "downstream" from it.

**AEW-R5200:** Press and release the Phones Level control knob to switch headphone monitoring from Channel 1 to Channel 2 and back again. Small, lighted indicators just above the knob show which receiver channel is being monitored.

### Power Connections

The switching power supply is designed to operate properly from any AC power source 100–240V, 50/60 Hz without user adjustment. Simply connect the receiver to a standard AC power outlet, **using only an IEC-type input cordset approved for the country of use.** Power to the unit is controlled by the front-panel Power switch.

**AEW-R5200:** An auxiliary AC "jumper" (pass-through) outlet is provided on the rear panel, and a "jumper" power cordset is included, to simplify power connections by "daisy-chaining" an array of AEW-R5200's. Maximum output from the auxiliary outlet is 5 Amperes, which will easily handle a full complement of AEW-R5200 units.

### "Link" Connections

Artist Elite Series multi-channel systems can comprise all AEW-R4100, all AEW-R5200, or combinations of AEW-R4100 and AEW-R5200 receivers. As many as 19 Artist Elite wireless systems may be operated simultaneously. The exclusive IntelliScan™ channel assignment system provides easy, automatic scanning of the RF spectrum and assignment of usable, compatible frequencies to all linked AEW receiver channels.

Both AEW receiver models can be interconnected using Link In/Out jacks and included link cables. In addition, the AEW-R5200 offers a built-in Ethernet 10BaseT connection, with interface software provided on CD-ROM. See the separate AEW Control Interface manual provided with AEW-R5200 receivers and 5000 Series systems.

All AEW receivers in a linked multi-channel system should be interconnected with included link cables. When the system is properly configured, the "slave" units will "link data in" to the "Master" unit. (See Figure B for an example.)

1. First, decide which receiver will be the "Master" unit. Connect a link cable to the **Link In** jack **only**. (In an AEW-R5200, the Channel 1 unit is the Master and Channel 2 becomes the first "slave.")
2. Connect the free end of the link cable from the Master unit (in #1 above) to the **Link Out** jack of the desired "next" unit.
3. Connect one end of a new link cable to the **Link In** jack of the unit in #2 above.
4. Connect the free end of the link cable from the unit in #2 above to the **Link Out** jack of the desired "next" unit.
5. Continue this process of "daisy-chaining" the system's receivers together with link cables. The "last" unit in the system will have a cable connected to its **Link Out** jack, but **no** connection to its **Link In** jack.


Installing link cables starting with the last slave unit and working toward the Master unit is also acceptable practice.

The attachment order of link cables establishes the numerical order of the receivers in the multi-channel system, from the selected Master unit through all the slave units. (In the case of AEW-R5200 receivers, a unit's Channel 1 always comes before its Channel 2.) In a multi-channel system that includes both models of receivers, it's common practice to position all the AEW-R5200 units **first** in the chain; followed any AEW-R4100 units.

Note 1: For the receiver linking to work, all receivers in the system must have AC power applied **at the same time**, or the Master receiver must be turned on **last**.

Note 2: In addition, if AC power is interrupted or a link connection is broken at **any** receiver in a linked system, **even for an instant**, receivers from that unit onward are no longer linked to the system. When all power and linking have been restored, **the system must be restarted by turning all the receivers Off, then On** (all turned on simultaneously, or the Master receiver must be turned on **last**). This will re-initialize the system and re-establish all the data links.

Figure B

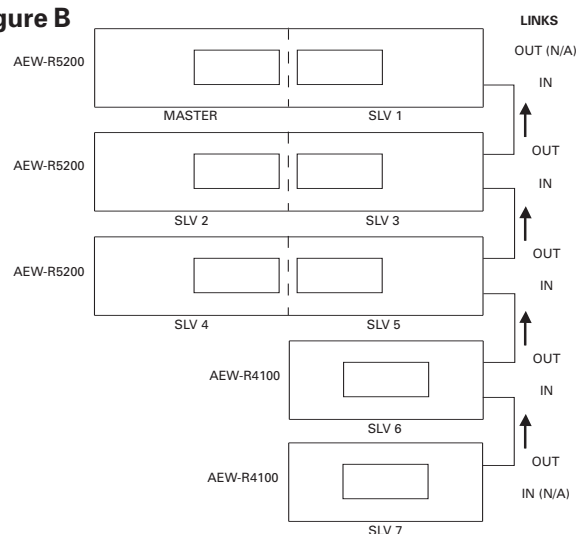



## Receiver Installation (Continued)

**Ethernet connections (AEW-R5200):** An RJ-45 jack on the rear panel of each AEW-R5200 provides an Ethernet 10BaseT data/control connection from both of its channels to an external computer system. Data monitored includes actual, real-time "RF" and "AF" levels for receiver channels with *direct* Ethernet connections to the associated computer. All other linked receivers in a system supply control-function access and all their data – except for "RF" and "AF" levels – to the computer connected to the Master receiver.


Multiple AEW-R5200 receivers in a system can each provide real-time "RF" and "AF" levels to the associated computer if *each* AEW-R5200 has its own Ethernet connection, through an Ethernet hub, to the computer.

Other than being able to "see" the "RF" and "AF" levels, all functions of all receivers in a linked system can be monitored and controlled from the computer connected to the Master receiver.

Details of the computer setup and operation will be found in a separate AEW Control Interface manual provided with AEW-R5200 receivers and 5000 Series systems.

## Receiver Controls and Functions

**Figure C AEW-R5200 Receiver Front Panel**

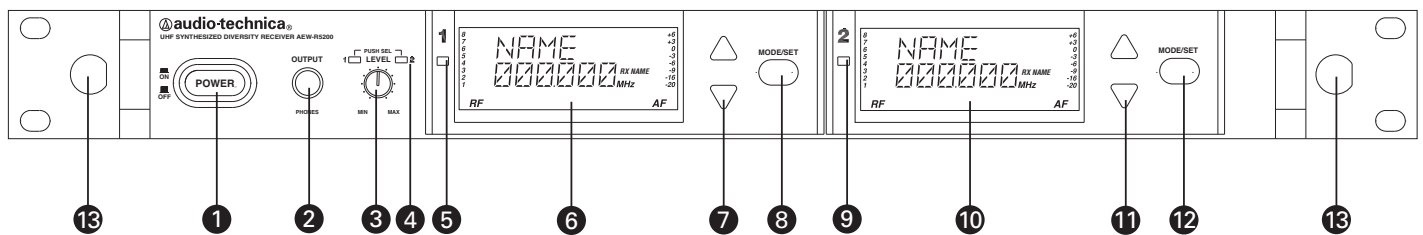


### Front Panel Controls and Functions (Fig. C)

- 1 POWER SWITCH: Press Power switch in and the receiver readouts will light.
- 2 HEADPHONE OUTPUT: 1/4" (6.3 mm) TRS ("stereo") phone jack. Plug in either a mono or "stereo" headphone to monitor receiver signal.
- 3 HEADPHONE LEVEL CONTROL / CHANNEL SWITCH: Adjusts the level of the headphone jack only; it does not affect receiver audio output. Press-and-release the knob to switch between Channel 1 and Channel 2.
- 4 HEADPHONE CHANNEL INDICATOR: Shows which receiver channel is feeding the monitor headphones.
- 5 / 9 ALERT INDICATOR: The Alert Indicator lights:
  - (a) When the receiver is in the Mute mode,
  - (b) When no RF signal is received from the transmitter,
  - (c) When only one or two RF signal-strength bars are on,
  - (d) When the transmitter is in the Mute mode,
  - (e) When audio modulation level from the transmitter is close to the clipping point (AF +6 bar), or
  - (f) When the "LOW BAT" warning appears in the LCD (transmitter battery is weak).
- 6 / 10 LCD WINDOW: Liquid Crystal Display indicates control settings and operational readings. See Figure G on page 13 for details.
- 7 / 11 UP/DOWN BUTTONS: Press Up or Down arrow button, in conjunction with the Mode/Set button, to step through menus, select operating frequency and edit receiver function choices.
- 8 / 12 MODE/SET BUTTON: Use in conjunction with the Up/Down arrow buttons to step through menus, choose operating frequency and select receiver function options.
- 13 FRONT-MOUNT ANTENNAS: Cables and panel connectors are included with the AEW-R5200 to permit attaching antennas at the front panel.

### Channel 1 / Channel 2


Figure D AEW-R5200 Receiver Rear Panel

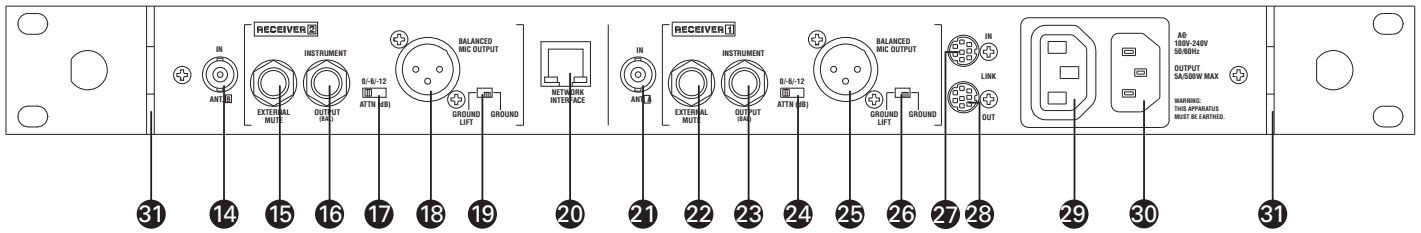

Rear Panel Controls and Functions (Fig. D)

- 14 ANTENNA INPUT JACK: BNC-type antenna connector for Tuner "B." Attach the antenna directly, or extend it with a low-loss antenna cable. See the "Antennas" section on page 8 for more details. Antenna power at +12 volts is available at both antenna jacks; select it via the LCD menu on Channel 1.
- 15/22 EXTERNAL MUTE: Permits manual and absolute muting of the receiver via a 1/4" TS phone jack and a user-provided external switch. "Shorting" the jack (closing the switch connection) mutes the receiver channel. When External Mute has been applied, the only way to un-mute the receiver is to open the External Mute switch connection.
- 16/23 INSTRUMENT OUTPUT JACK: 1/4" transformer-isolated TRS balanced phone jack output. Tip: "audio +"; Ring: "audio -"; Sleeve: ground (shield). Can be connected to an aux-level input of a mixer, guitar amp or tape recorder. Using the associated Ground Lift switch permits feeding equipment with different ground levels.
- 17/24 AF OUTPUT ATTENUATOR: Three-position switch adjusts audio output level of both audio output jacks, with attenuation of 0 dB, -6 dB or -12 dB.
- 18/25 MIC OUTPUT JACK: XLRM-type connector. Pin 1: ground (shield); Pin 2: "audio +"; Pin 3: "audio -". A standard 2-conductor shielded cable can be used to connect the receiver output to a balanced microphone-level input on a mixer or integrated amplifier. This output is transformer-isolated from the 1/4" TRS Instrument output jack.
- 19/26 GROUND LIFT SWITCH: Disconnects the ground of both the Mic and Instrument output jacks on the associated receiver channel. Normally, the switch should be to the right (ground connected). If hum caused by a ground loop occurs, slide switch to the left (ground lifted).
- 20 NETWORK INTERFACE CONNECTOR: An Ethernet connection on the AEW-R5200 provides full communication and monitor/control by an associated computer. See the separate AEW Control Interface manual for computer setup and operation.
- 21 ANTENNA INPUT JACK: Connector for Tuner "A." Attach the antenna directly, or extend it with a low-loss antenna cable.
- 27 LINK IN JACK: Connect the provided cable to this jack with the index mark on the plug aligned toward the screw head to the right of the jack. The receiver with a Link In and no Link Out connection is the "Master" unit. (With an AEW-R5200 in the Master position, its Channel 1 is the system's Master and its Channel 2 is the first "slave.")
- 28 LINK OUT JACK: Connect the provided cable to this jack with the index mark on the plug aligned toward the screw head to the right of the jack. The receiver with a Link Out and no Link In connection is the last slave in a multi-unit system.
- 29 AUXILIARY AC OUTLET: An auxiliary AC pass-through outlet and included "jumper" power cordset simplify making power connections to an array of AEW-R5200's. Maximum output from the auxiliary AC outlet is 5 Amperes.
- 30 AC POWER INPUT: IEC-type connector for 100V-240V AC, 50/60 Hz power input. No adjustment for mains voltage/frequency is necessary.
- 31 REAR RACK MOUNT: Mounts are provided at the rear of the side panels to permit attachment to rear rack rails in racks so equipped. The additional support is especially helpful when equipment is transported.


Figure E AEW-R4100 Receiver Front Panel

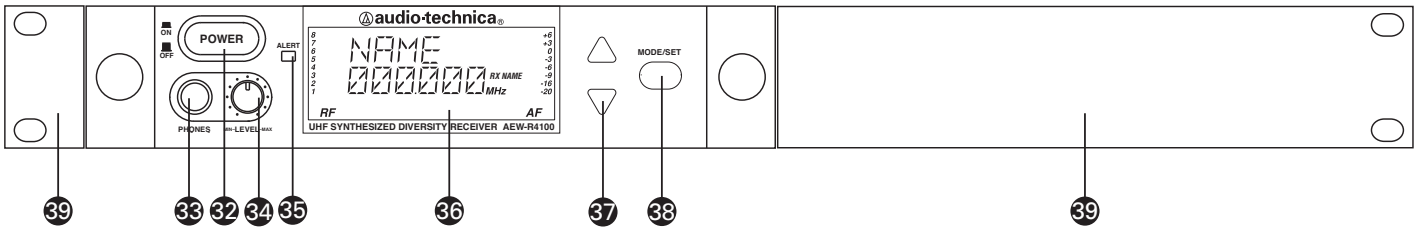

**Front Panel Controls and Functions (Fig. E)**

- 32 POWER SWITCH: Press Power switch in and the receiver readouts will light.
- 33 HEADPHONE OUTPUT: 1/4" (6.3 mm) TRS ("stereo") phone jack. Plug in either a mono or "stereo" headphone to monitor receiver signal.
- 34 HEADPHONE LEVEL CONTROL: Adjusts the level of the headphone jack only; it does not affect receiver audio output.
- 35 ALERT INDICATOR: The Alert Indicator lights:
  - (a) When the receiver is in the Mute mode,
  - (b) When no RF signal is received from the transmitter,
  - (c) When only one or two RF signal-strength bars are on,
  - (d) When the transmitter is in the Mute mode,
  - (e) When audio modulation level from the transmitter is close to the clipping point (AF +6 bar), or
  - (f) When the "LOW BAT" warning appears in the LCD (transmitter battery is weak).
- 36 LCD WINDOW: Liquid Crystal Display indicates control settings and operational readings. See Figure G on page 13 for details.
- 37 UP/DOWN BUTTONS: Press Up or Down arrow buttons, in conjunction with the Mode/Set button, to step through menus, select operating frequency and edit receiver function choices.
- 38 MODE/SET BUTTON: Use in conjunction with the Up/Down arrow buttons to step through menus, choose operating frequency and select receiver function options.
- 39 MOUNTING ADAPTERS: For mounting the receiver in any standard 19" rack. Attach to the receiver with the screws supplied. (Use an optional AT8628a joining-plate kit to mount two AEW-R4100 receivers side by side.)


Figure F AEW-R4100 Receiver Rear Panel

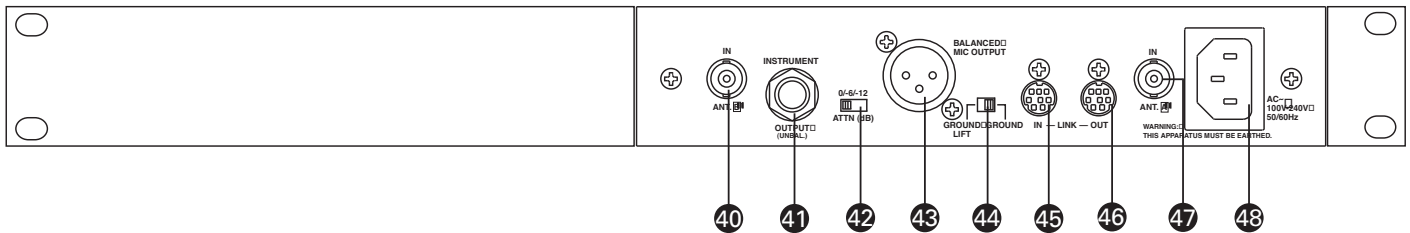

Rear Panel Controls and Functions (Fig. F)

- 40 ANTENNA INPUT JACK: BNC-type antenna connector for Tuner "B." Attach the antenna directly, or extend it with a low-loss antenna cable. See the "Antennas" section on page 8 for more details.
- 41 INSTRUMENT OUTPUT JACK: 1/4" phone jack. Can be connected to an aux-level input of a mixer, guitar amp or tape recorder. On the AEW-R4100, this is an unbalanced TS phone jack.
- 42 AF OUTPUT ATTENUATOR: Three-position switch adjusts audio output level of both audio output jacks with attenuation of 0 dB, -6 dB or -12 dB.
- 43 MIC OUTPUT JACK: XLRM-type connector. A standard 2-conductor shielded cable can be used to connect the receiver output to a balanced microphone-level input on a mixer or integrated amplifier.
- 44 GROUND LIFT SWITCH: Disconnects the ground pin of the balanced output jack (43) from ground. Normally, the switch should be to the right (ground connected). If hum caused by a ground loop occurs, slide switch to the left (ground lifted).
- 45 LINK IN JACK: Connect provided cable to this jack with the index mark on the plug aligned toward the screw head above the jack. The receiver with a Link In and no Link Out connection is the "Master" unit.
- 46 LINK OUT JACK: Connect provided cable to this jack with the index mark on the plug aligned toward the screw head above the jack. The receiver with a Link Out and no Link In connection is the last unit in a multi-unit system.
- 47 ANTENNA INPUT JACK: Connector for Tuner "A." Attach the antenna directly, or extend it with a low-loss antenna cable.
- 48 AC POWER INPUT: IEC-type connector for 100V-240V AC, 50/60 Hz power input. No adjustment for mains voltage/frequency is necessary.

Figure G Receiver LCD Window

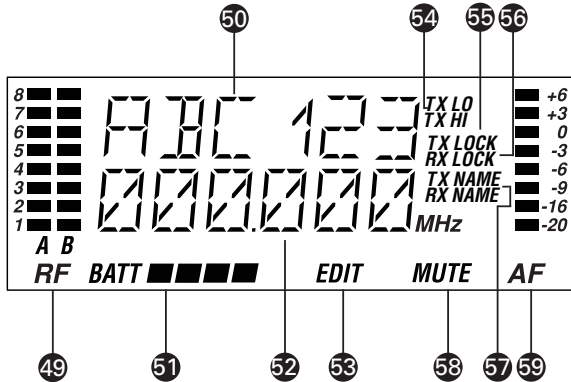

- 49 RF SIGNAL LEVEL INDICATOR: Shows the strength of the RF signal received from the transmitter. Also indicates which Tuner (A or B) has the better reception and is in operation. When the METER HOLD function is on, the lowest-level RF signal received from the transmitter is indicated by a flashing bar.
- 50 ALPHANUMERIC DISPLAY: Shows Receiver Name (57), Transmitter Name (57), or Link Address (MASTER, or SLV and the slave number). The factory setting displays "DEF" in Receiver Name mode ("RX NAME"). Once the settings have been changed, the unit will display the last setting and mode selected. Also flashes the "LOW.BAT" warning when the associated transmitter's batteries are weak.
- 51 TRANSMITTER BATTERY INDICATOR: Displays a maximum of four bar segments, with four bars indicating full power.
- 52 FREQUENCY DISPLAY: Indicates the current frequency setting in MHz.
- 53 "EDIT": Appears and flashes when the receiver is in edit mode.
- 54 TRANSMITTER RF POWER DISPLAY: Indicates either "TX LO" or "TX HI".
- 55 "TX LOCK": Appears when the transmitter is in one of its three lock settings (ALL.LOC, MUT.LOC or PWR.LOC).
- 56 "RX LOCK": Appears when the receiver is in one of its three lock settings (ALL.LOC, PC.LOC or RX.LOC).
- 57 TX/RX NAME: Indicates whether the transmitter name or the receiver name is displaying in the top line of the LCD display.
- 58 "MUTE": Appears when the receiver or transmitter is muted, when the receiver is not receiving an audio signal, or when the receiver is externally muted by use of the EXTERNAL MUTE jack.
- 59 AF LEVEL INDICATOR: Shows the audio modulation level of the received signal. When the METER HOLD function is on, the bar corresponding to the highest level reached will stay lit.

### Receiver Controls

#### Power On/Off

Press the power switch to turn the receiver on. After a short power-up sequence, the display shows the operating frequency and the alert light is illuminated (if no active transmitters are present on this frequency). The receiver may also display a system position (i.e., "MASTER", "SLV-#") or an assigned transmitter or receiver name (if this feature has been set up—the display recalls the setting from the last time power was applied). Refer to page 16 on setting up receiver names or page 20 on setting up transmitter names.

#### Level

This control is used to set a comfortable listening level for the headphone jack. Turn the control clockwise to increase the level.

#### LCD Window

The LCD (Liquid Crystal Display) window provides visual indication of key operating and configuration parameters. It is also used in conjunction with the Mode/Set and Up/Down arrow buttons to change user-configurable functions.

#### Alert Light (LED)

The alert light illuminates to indicate to the user that something needs attention; for example, the transmitter batteries are low, or the transmitter is muted or turned off. Refer to page 10 for a complete description of alert light indications.

#### Mode/Set Button

The Mode/Set button has different functions depending on the status of the receiver. Two distinct operations are associated with this button:

**Touch:** A momentary press of the Mode/Set button. It is used to enter Menu mode, to enter Edit mode, or to Escape without making any changes to current settings.

**Hold:** A press and hold (about two seconds) of the Mode/Set button. It is used to accept a new setting when the receiver is in Edit mode or to save the current settings to one of the five user-defined name presets or the internal memory location ("NAME?").

#### Up/Down Arrow Buttons

The Up/Down arrow buttons are used in conjunction with the Mode/Set button to scroll through the function menu in Menu mode or through the available choices for a given function in Edit mode.

When the receiver is in normal operating mode, the Up/Down arrow buttons scroll through Receiver Address ("MASTER" or "SLV-#"), Receiver Preset Name, or Transmitter Preset Name.

### How to change receiver settings

#### Enter Menu mode

With the receiver in the normal operating mode, **touch** the Mode/Set button. The top line of the receiver display shows "FRQ" preceded by one, two, or three asterisks.

**Touch** the Up/Down arrow buttons to scroll through the available functions that may be changed. (See the chart on page 17 for a list of functions and display indication.) Note that the display's lower line indicates the current setting for a given function.

#### Enter Edit mode

When the function to be edited is displayed, **touch** the Mode/Set button. The small word "EDIT" flashes in the bottom of the display, indicating Edit mode.

**Touch** the Up/Down arrow buttons to scroll through the available choices for the function, stopping on the desired choice.

**Hold** the Mode/Set button to accept the new choice. "STORED" appears in the display when the choice is accepted. The receiver then reverts to Menu mode.

Continue this process until all desired function-setting changes are complete.

Note: To escape from Edit mode without making any changes, **touch** the Mode/Set button. "ESCAPE" appears briefly in the display, and the receiver reverts to Menu mode.

#### Quitting and saving changes

The receiver has several methods of saving function settings. Each receiver has five loadable user presets that may be given individual names (up to six characters), along with a special, non-loadable memory location called "NAME?" that can store the most recent settings until they are changed.

To save a set of receiver function settings, use the Up/Down arrow buttons to scroll until the display shows "QUIT." The procedure for saving the current settings depends upon the desired location:

#### Saving to the "NAME?" location

If the current receiver settings do *not* need to be identified with a name, the special "NAME?" location may be used to store them. As with the "last number redial" function on a telephone, these settings remain stored in the receiver even if power is turned off. They disappear only if one of the settings is modified.

To store settings in the "NAME?" location, **touch** the Mode/Set button. The display shows "NAME?" for the receiver name.

#### Saving updated settings to the currently loaded user "PRESET#" location

To update the receiver settings in the currently loaded user preset that is already named, **hold** the Mode/Set button. The display shows "STORE XXXXXX" (where XXXXXX indicates the preset's name).

**Hold** the Mode/Set button a *second* time. The first character of the name flashes.

**Hold** the Mode/Set button a *third* time. The display briefly shows "STORED", and the receiver reverts to normal operation.

## Receiver Controls and Functions (Continued)

### Saving to a different user PRESET# location

To store settings to a different user preset location, **hold** the Mode/Set button. The receiver shows "STORE XXXXXX" (where XXXXXX indicates the loaded preset's name).

**Touch** the Up/Down buttons to scroll to another preset location (the display shows the user-defined name for each location, or "PRESET#" if no name has been assigned).

At the desired preset location, **hold** the Mode/Set button. The first character of the name becomes the cursor and flashes.

**Touch** the Up/Down arrow buttons to scroll through the characters until the desired character is displayed. **Touch** the Mode/Set button to accept the character and advance to the next character. To advance the cursor without changing the character, **touch** the Mode/Set button.

After setting the last character, **hold** the Mode/Set button to store the name and revert to normal operation. **Holding** the Mode/Set button at any time during the naming process while the cursor is flashing will store the setting and return the receiver to normal operation.

Note: To escape the naming process, **touch** the Mode/Set button repeatedly until the last character is flashing, and then **touch** the Mode/Set button again to escape. At the flashing "ESCAPE" display, **touch** the Mode/Set button to go back to the beginning of the name, or **hold** the Mode/Set button to return to "QUIT."

Note: While the receiver is in Edit mode, no action (no buttons pressed) for approximately 30 seconds causes the receiver to revert to Menu mode.

While the receiver is in Menu mode, no action for approximately 30 seconds causes the receiver to revert to normal operating mode. Any setting changes stored will remain in the "NAME?" memory location, and the receiver will display "NAME?" because the settings were not saved to a user preset. This will occur even if a user preset was previously loaded.

### Receiver Functions

#### IntelliScan™ Channel Assignment System

The IntelliScan™ channel assignment system, provided on both the AEW-R4100 and AEW-R5200 receivers, eliminates the trouble and frustration normally encountered while attempting to find and select usable, compatible frequencies in a multi-channel system. The Artist Elite receivers are simply connected together with included communication link cables. A "Master" receiver then "knows" how many total channels it is looking for. It can scan the available frequencies, checking for local interference sources, selecting a group of channels that will all work together (using a built-in frequency plan), and automatically setting the other linked AEW receivers accordingly. Once this procedure is completed, the transmitter frequencies must be set to match the receiver frequencies.

### Receiver Locks

Programmable locks restrict the ability to change receiver settings, reducing the possibility of unauthorized access or unintended changes during performances.

Setting	Description
---------	-------------

NO.LOC	Receiver functions and frequency settings can be edited from the receiver's front panel or from an associated computer via an Ethernet connection to a linked AEW-R5200.
ALL.LOC	Receiver functions and frequency settings <b>cannot</b> be edited from the front panel or from a computer via an Ethernet connection to a linked AEW-R5200. <i>ALL.LOC</i> must be changed via the receiver's Menu before other settings can be changed.
PC.LOC	Receiver functions and frequency settings can be edited from the receiver's front panel, but they <b>cannot</b> be edited from an associated computer (via an Ethernet connection to a linked AEW-R5200).
RX.LOC	Receiver functions and frequency settings can be edited from an associated computer (via an Ethernet connection to a linked AEW-R5200), but they <b>cannot</b> be edited from the receiver's front panel.

When **any** lock condition is applied to a receiver (*ALL.*, *RX.* or *PC.*), the LCD window displays a small "RX LOCK" just to the right of the frequency. If an action is attempted that currently is locked out, the LCD will briefly display "LOCKED", then return to its previously displayed contents.

Note: Locks remain in place even when receiver power is turned off. However, locks may be removed by using the Menu.

### Antenna Power

This function turns on the 12V AC antenna power for use with powered antennas or accessories.

### Digital Tone Lock™ Squelch

The Artist Elite Series employs a unique digital Tone Lock squelch system that provides enhanced rejection of interference. In addition to providing highly effective control of unwanted noise, the Tone Lock signal from the transmitter also conveys data with the transmitter's name (Tx Name), battery condition, mute status and lock status back to the receiver for display. In addition to displaying in the receiver's LCD window, the data are also displayed on an Ethernet-connected computer.

The squelch level is adjustable in fifteen 2-dB steps, providing a 30 dB range. Increasing the squelch level – also called "tightening the squelch" – can cause a reduction in usable range of the wireless transmitter, so use the lowest value that reliably mutes the unwanted RF signals. (If interference is a problem, first consider trying a different frequency, either manually or by scanning.)

### Meter Hold

When activated ("METER HOLD"), this function permits the bar meters in the LCD window to capture and display the *highest*-level "AF" audio modulation (a solid bar) and the *lowest*-level "RF" signal (a flashing bar) received from the transmitter. This is particularly useful when setting up the system initially, performing a sound-check, or diagnosing operating problems. The default setting is Off ("METER NORMAL").

When the Meter Hold is On, it is possible to reset it – to obtain a new set of RF and AF readings – without turning it off-and-on using the Menu/Edit functions. Simply press the transmitter's Power/Mute button once (to mute the transmitter) and **wait until the receiver's Alert light comes on**, indicating the Mute condition. Then press the transmitter's Power/Mute button once again, to un-mute the transmitter. **After the Alert light goes out**, a new set of min/max RF/AF readings will be indicated on the bar meters. (Note that, depending upon the digital updating-and-confirming sequence of the Mute condition data from the transmitter, it can take from a few to many seconds for the Alert light condition to change. **The Meter Hold readings are not reset until the Alert light has turned on, then off.**)

Note: Any or all of these receiver functions may be stored to, or loaded from, one of the five user presets.

### Using "PRESET" Store and Recall

There are two aspects to Preset operation: **Storing** a particular collection of settings for future use ("STORE"), and **recalling** a stored collection of settings ("LOAD"). All Artist Elite receivers and transmitters permit the storing and recalling of up to five user-defined Preset combinations—with customized names, if desired—plus the recalling of the factory-defined Default ("DEF") settings.

While the standard Preset names ("PRSET1" – "PRSET5") can be used, customized receiver and transmitter identification can simplify system operation, especially in larger systems. For example, a guitar channel's Rx Name could be "GUITAR", while the transmitters for the performer's two different guitars could be named "GTR-1" and "GTR-2".

#### To store Preset configurations:

1. **Touch** the Mode/Set button once to move to Menu mode.
2. **Touch** the Up arrow twice to move to "PRESET" in the LCD window. (The second line of LCD will show currently loaded presets.)
3. **Touch** the Mode/Set button once. "LOAD" (or "STORE") appears in the LCD.
4. **Touch** the Up or Down arrow once, if needed, to change the selection to "STORE."
5. **Hold** the Mode/Set button until "PRSET1" (or the name of the currently loaded Preset) appears on the second line of the LCD.
6. If desired, **touch** the Up or Down arrow to cycle through the available choices: "PRSET1" through "PRSET5" (or their previously changed names).

7. Accept or enter a name for the Preset:
  - a. To accept the **standard** name "PRSET1" – "PRSET5" (or previously stored name) for a new Preset configuration and to update (overwrite) any previously stored configuration choices:
    - a1. At the desired choice, **hold** Mode/Set until the first character blinks, giving an opportunity to change the name.
    - a2. To accept the standard (or existing) name, **hold** the Mode/Set button again until "STORED" appears in the window. This stores the standard or existing Preset name with the associated function choices and returns the unit to normal operation. The name of the stored preset will appear in the top line of the display.
  - b. To enter a **custom** name for a Preset:
    - b1. At the desired choice, **hold** the Mode/Set button. The first character blinks.
    - b2. Using the Up or Down arrow, move through the available characters (see box below) until the desired character is reached. **Touch** an arrow button for single steps, or **hold** it down to scroll through the characters at increasing speed.
    - b3. **Touch** the Mode/Set button **once** to accept the first character and move to the second character, which now is blinking. Use an Up/Down arrow button to find the desired second character; **touch** the Mode/Set button once to accept it and move to the third position. Repeat this selection process until the character for the sixth position has been selected.
    - b4. Once the sixth character has been selected as desired, **hold** the Mode/Set button until "STORED" appears in the window. This stores the custom Name with the associated function choices and returns the unit to normal operation. The display shows the custom name in the top line.

Note: If a correction or change is desired while entering characters, simply **touch** the Mode/Set button **once** when the sixth (last) character has been reached. The window will flash "ESCAPE." **Touch** the Mode/Set button once more to start the name-entry process over at the first character. (To leave any characters as they are, simply **touch** Mode/Set once to skip over them.)

Available receiver Name character choices:

A ...through... Z,  
 \_ (underscore) ... (space) ...  
 [ (left bracket) ... ] (right bracket),  
 \* ... + ... - ... / ,  
 0 ...through... 9,  
 | ... < ... > ... ?

## Receiver Controls and Functions *(Continued)*

### **To load (recall) a Preset:**

1. **Touch** the Mode/Set button once to move to Menu mode.
2. **Touch** the Up arrow twice. LCD top line shows "PRESET."
3. **Touch** the Mode/Set button once. "LOAD" (or "STORE") appears in the LCD.
4. If needed, **touch** the Up arrow once to change the selection to "LOAD."
5. **Hold** the Mode/Set button. The name of the currently loaded Preset appears on the second line of the LCD.
6. **Touch** the Up or Down arrow to cycle through the available choices, stopping on the desired choice.
7. **Hold** the Mode/Set button until "LOADED" appears briefly in the LCD. The receiver reverts to normal operation with the selected preset's functions loaded. The top display line indicates the loaded preset and the bottom line the current frequency.

### **To revert to factory-default values:**

1. **Touch** the Mode/Set button once to move to Menu mode.
2. **Touch** the Up arrow twice. "PRESET" shows in the LCD window.
3. **Touch** the Mode/Set button once. "LOAD" (or "STORE") appears in the LCD.
4. **Touch** the Up arrow once, if needed, to change the selection to "LOAD."
5. **Hold** the Mode/Set button. The name of the currently loaded Preset appears on the second line of the LCD.
6. **Touch** the Up/Down arrow buttons to cycle through the available choices until "DEF" appears in the display.
7. **Hold** the Mode/Set button to load the factory default settings. "LOADED" appears briefly in the LCD. The receiver then reverts to normal operation at factory-default values. "DEF" appears in the upper line of the LCD.

**Note: Loading the default setting will also revert the receiver frequency to default to the first frequency value in the Band used**

Receiver Functions	Function Menu	Default Value	Choices (Edit) ▲▼	Wrap-around*
▲▼	Frequency	Lowest in band	Approximately 200 discrete frequencies	Yes
▲▼	Scan**/**	No value	Scan start	–
▲▼	Lock	NO.LOC	NO.LOC ALL.LOC PC.LOC RX.LOC	Yes
▲▼	Antenna Power**	OFF	OFF ON	Yes
▲▼	Squelch	-(one bar)	15 steps, 2 dB each	No
▲▼	Meter	NORMAL	NORMAL HOLD	Yes
▲▼	Preset	PRESET	Press once, then select LOAD or STORE	Yes
▲▼	LOAD:	DEF	DEF (default), PRSET1 through PRSET5	Yes
▲▼	STORE:	PRSET1	PRSET1 through PRSET5	Yes
▲▼	Quit (exit Menu)	QUIT	Press Mode/Set once to exit	–

\* Continue in the same Up/Down direction and choices "wrap around" to the other end of the range.  
 \*\* AEW-R5200: Scan and Antenna Power selections in LCD menu on Channel 1 only.  
 \*\*\* Scan selection is not available when the receiver has been linked as a slave unit.

**Table 1. Receiver Functions**



## Transmitter Controls and Functions

Refer to Figures H through Q for an overview of transmitter functions and controls.

**Touch:** A momentary press of the Mode/Set button. It is used to enter Menu mode, to enter Edit mode, or to Escape without making any changes to current settings.

**Hold:** A press and hold (about two seconds) of the Mode/Set button. It is used to accept a new setting when the receiver is in Edit mode or to save the current settings to one of the five user-defined name presets or the internal memory location ("NAME?").

### LCD Window

The Liquid Crystal Display presents a great deal of setup and operating information clearly and conveniently (Figure H). The LCD in the transmitters is designed for greatest contrast and best viewing with the window rotated somewhat *away* from the viewer (about 30 degrees), not straight-on, for a more convenient holding/viewing position.

### Power/Mute Button

The transmitters have a combination Power and Mute switch (Figure J/K). When used in combination with the programmed choices explained below, the various functions available to the transmitter user may be tailored to fit personal preferences or particular situations.

### Power On/Off

To turn the transmitter on, **hold** the Power/Mute button until the red power indicator and the LCD window come on (about 1–2 seconds). The operating frequency shows in the window after the power-up sequence.

To turn the transmitter off, **hold** the Power/Mute button again, until the red power indicator and the LCD window are extinguished (about 1–2 seconds). The LCD window shows "PWR.OFF" before shutdown.


### Mute On/Off

When the transmitter is muted, it produces RF with no audio signal modulation. When the transmitter is un-muted, it produces both RF and audio.


To mute the transmitter (cut off the audio, but continue the RF output), **touch** the Power/Mute button **once**. A small "MUTE" appears in the LCD window, just below the frequency (Figure H-2).

To un-mute the transmitter (restore the audio), **touch** the Power/Mute button **once** again. The "MUTE" disappears from the LCD window.


**Figure H**

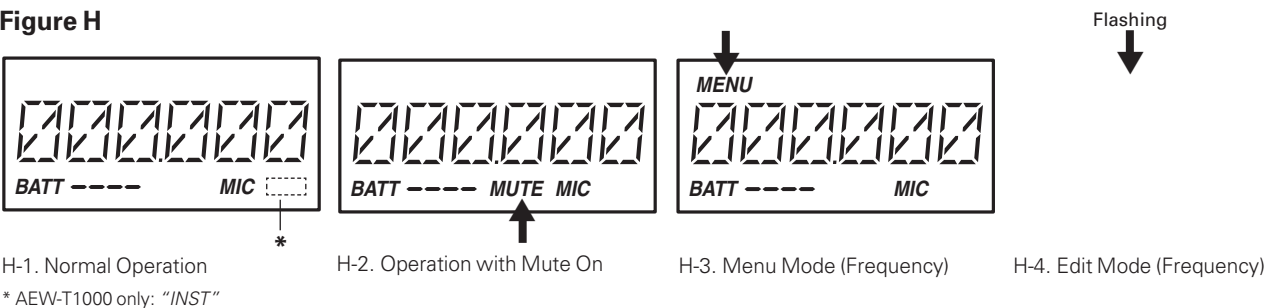

**Figure J**

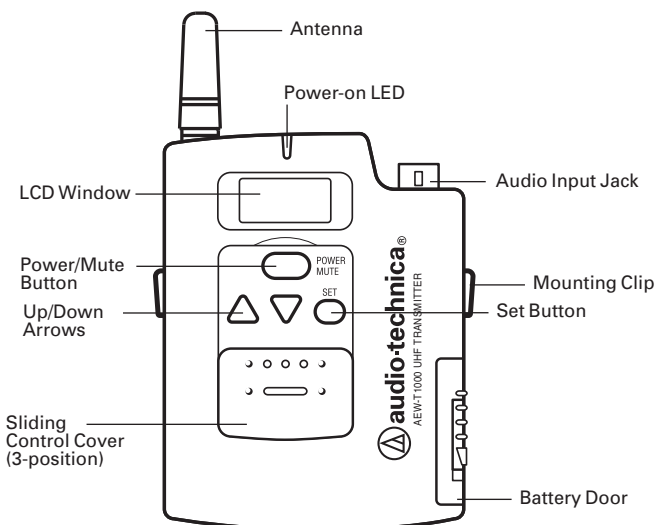

**Figure K**

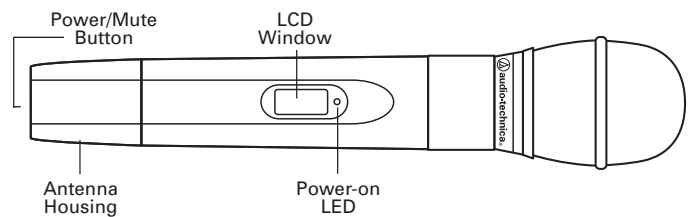

## Transmitter Controls and Functions (Continued)

### Power/Mute Locks

Programmable Power/Mute Locks limit the functioning of the Power/Mute button as desired for particular users and/or applications. Power can be locked On; Mute can be locked Off. Selection of the desired locks, if any, is made through the function menu:

Setting	Description
<i>NO.LOC</i>	The normal Power and Mute functions are fully operational.
<i>ALL.LOC</i>	Power is locked On and Mute is locked Off when " <i>ALL.LOC</i> " is applied. When in the <i>ALL.LOC</i> mode, the transmitter may be turned off by (1) re-accessing the <i>.LOC</i> Menu and changing the setting, (2) pressing and holding the Up arrow button <b>and</b> the Set button <b>at the same time</b> , until the power goes off, or (3) removing and re-installing the batteries. When the transmitter is turned on again, it will power up in the <i>NO.LOC</i> mode.
<i>MUT.LOC</i>	In this mode, the audio cannot be muted (Mute function is locked Off). The Power functioning is unaffected.  "Mute" Note: If <i>ALL.LOC</i> or <i>MUT.LOC</i> is applied <b>while the transmitter is muted</b> , pressing the Power/Mute button once will return the transmitter to un-muted operation; thereafter the Mute function is disabled (Mute Off) until the <i>.LOC</i> setting is changed again.
<i>PWR.LOC</i>	Power is locked On when " <i>PWR.LOC</i> " is applied. The Mute functioning is unaffected. When in the <i>PWR.LOC</i> mode, the transmitter may be turned off by: (1) Re-accessing the <i>.LOC</i> Menu and changing the setting, (2) Pressing and holding the Up arrow button <b>and</b> the Set button <b>at the same time</b> , until the power goes off, or (3) Removing and re-installing the batteries. When the transmitter is turned on again, it will power up in the <i>NO.LOC</i> mode.  Note: Only the <i>ALL.LOC</i> or <i>PWR.LOC</i> Power function will change when batteries are removed; <i>NO.LOC</i> and <i>MUT.LOC</i> settings remain stored in memory.

If an action is attempted that currently is locked out, the transmitter LCD will briefly display "*LOC.KED*", then return to its previously displayed contents.

Whenever any lock condition is applied to a transmitter, its associated **receiver** will display a small "*TX LOCK*" in the LCD window, just to the right of the frequency.

### Audio Input Selector

The UniPak™ body-pack transmitter provides input connections for both low-impedance (Lo-Z) microphones and high-impedance (Hi-Z) instruments. A wide range of Audio-Technica Wireless Essentials™ microphones and cables is available pre-terminated with the appropriate professional latching connector. (See page 28.)

Selection of the desired input – microphone or instrument – is made through the function menu. Depending upon the input selected, a small "*MIC*" or "*INST*" will continue to show in the LCD window, just below the frequency. (In the handheld transmitters, "*MIC*" will always show in the LCD window.)

### Setting Audio Input Level

**AEW-T1000 UniPak:** A 10-position audio input gain setting, selected through the function menu, serves to match the audio input level to the transmitter for best modulation with minimum distortion. Available choices are +12 dB to –6 dB in 2 dB steps. The default value is +6 dB.

#### **AEW-T4100 and AEW-T6100 Dynamic Handhelds:**

A 4-position audio input gain setting, selected through the function menu, serves to match the audio input level to the transmitter for best modulation with minimum distortion. Available choices are +12 dB to –6 dB in 6 dB steps. The default value is +6 dB.

#### **AEW-T3300 and AEW-T5400 Condenser Handhelds:**

A 3-position audio input gain setting, selected through the function menu, serves to match the audio input level to the transmitter for best modulation with minimum distortion. Available choices are +12 dB, +6 dB and 0 dB. The default value is +6 dB. In addition, a mechanical pad switch on the condenser capsule (inside the screw-on wire mesh grille) can provide another 6 dB of attenuation. For best performance, adjust the input level using the function menu choices, keeping the capsule's mechanical switch at 0 dB. If more audio attenuation is needed than the menu provides, then set the capsule's pad switch to –6 dB.

**For all transmitters:** Select the highest audio level setting that does not result in over-modulation with the highest audio/instrument input levels (an AF indication on the receiver no higher than "+3"); watch the receiver's "*AF*" meter "+6" indication and the Alert light to make certain they are not triggered often by the highest audio levels.

The transmitter's red LED power indicator, which is on during normal operation, will blink **off** if the peak audio input reaches overload level.

### Preset/Default Settings

A "PRESET" selection in the menu permits the storing of up to five different user-definable configurations. Customized names, using letters, numbers and symbols, can also be created and stored for Presets 1–5. In addition, a Default ("DEF") choice permits returning all transmitter functions to their factory-default settings.

#### To store Preset configurations:

1. **Touch** the Set button once to move to Menu mode.
2. **Touch** the Up arrow twice to move to "PRESET" in the LCD window.
3. **Touch** the Set button once and "LOAD" (or "STORE") will appear in the LCD.
4. **Touch** the Up or Down arrow once, if needed, to change the selection to "STORE".
5. **Hold** the Set button until "STORE" changes to "PRSET1" (or the name of the currently loaded Preset).
6. If desired, **touch** the Up or Down arrow to cycle through the available choices: "PRSET1" through "PRSET5" (or their previously changed names).
7. Accept or enter a name for the Preset:
  - a. To accept the **standard** name (PRSET1 – PRSET5, or the previously stored name) for a new Preset configuration and to update (overwrite) any previously stored configuration choices:
    - a1. At the desired Preset, **hold** the Set button until the first character blinks.
    - a2. **Hold** the Set button again until "STORED" appears in the window. This stores the standard Preset name with the associated function choices and returns the transmitter to normal operation.
  - b. To enter a **custom** name for a Preset:
    - b1. At the desired Preset, **hold** the Set button until the first character blinks.
    - b2. Using the Up or Down arrow, move through the available characters (see box below) until the desired character is reached. **Touch** an arrow button for single steps, or hold it down to scroll through the characters at increasing speed.
    - b3. **Touch** the Set button once to accept the first character and move to the second character, which now is blinking. Use an Up/Down arrow to find the desired second character; **touch** the Set button once to accept it and move to the third position. Repeat this selection process until the character for the sixth position has been selected. (It is not necessary to change or step through all six characters before storing the result. At any point in the process, simply **hold** the Set button until "STORED" appears in the window.)
    - b4. Once the sixth character has been selected as desired, **hold** the Set button until "STORED" appears in the window. This stores the custom Name with the associated function choices and returns the transmitter to normal operation.

Note: If a correction or change is desired while entering characters, simply **touch** the Set button **once** when the sixth (last) character has been reached. The window will flash "ESCAPE." **Touching** the Set button **once more** will start the name-entry process over at the first character. (To leave any characters as they are, simply **touch** the Set button once to skip over them.)

Available transmitter Name character choices (listed in the Up-arrow direction):

A ...through... Z,  
 \_ (underscore) ... (space),  
 [ (left bracket) ... ] (right bracket),  
 \* ... + ... - ... /,  
 0 ...through... 9,  
 | ... < ... > ... ?

#### To load (recall) a Preset:

1. **Touch** the Set button once to move to Menu mode. (The window changes to frequency, if Name had been displayed.)
2. **Touch** the Up arrow twice to move to "PRESET" in the LCD window.
3. **Touch** the Set button once. "LOAD" (or "STORE") appears in the LCD.
4. If needed, **touch** the Up or Down arrow once, to change the selection to "LOAD."
5. **Hold** the Set button until "<sup>LOAD</sup>xxxxxx" (the current Preset) appears in the LCD.
6. **Touch** the Up or Down arrow to change the selection from "xxxxxx" to the desired Preset.
7. **Hold** the Set button until "LOADED" appears briefly in the LCD. The transmitter reverts to normal operation with the selected preset's settings loaded. To toggle between transmitter name and frequency, **touch** an Up or Down arrow button.

#### To revert to factory-default values:

1. **Touch** the Set button once to move to Menu mode.
2. **Touch** the Up arrow twice. "PRESET" shows in the LCD window.
3. **Touch** the Set button once. "LOAD" (or "STORE") appears in the LCD.
4. **Touch** the Up or Down arrow once, if needed, to change the selection to "LOAD."
5. **Hold** the Set button. The current Preset appears in the LCD.
6. **Touch** the Up or Down arrow buttons to cycle through the available choices until "DEF" appears in the display.
7. **Hold** the Set button to load the factory default settings. "LOADED" appears briefly in the LCD. The transmitter reverts to normal operation at the default settings.

**Note:** Loading the default setting resets the transmitter frequency to default to the first frequency value in the Band used.

## Transmitter Controls and Functions (Continued)

<b>UniPak Transmitter Functions</b>			
Function Menu	Default Value	Choices (Edit) ▲▼	Wrap-around*
▲▼ Frequency	Lowest in band	Approximately 200 discrete frequencies	Yes
▲▼ RF Power	<i>RF LOW</i>	<i>RF LOW RF HI</i>	Yes
▲▼ Audio Input Level	<i>+6 dB</i>	<i>-6 dB to +12 dB</i> in 2 dB steps	No
▲▼ Power/Mute Locks	<i>NO.LOC</i>	<i>NO.LOC ALL.LOC MUT.LOC PWR.LOC</i>	Yes
▲▼ Input Select	<i>MIC</i>	<i>MIC INSTR</i>	Yes
▲▼ Preset Configurations	<i>PRESET</i>	<i>LOAD STORE</i>	Yes
▲▼ <i>LOAD:</i>	<i>DEF</i>	<i>DEF</i> (default), <i>PRSET1</i> through <i>PRSET5</i>	Yes
▲▼ <i>STORE:</i>	<i>PRSET1</i>	<i>PRSET1</i> through <i>PRSET5</i>	Yes
▲▼ Quit (exit Menu)	<i>QUIT</i>	Press Set once to exit	--

\* Continue in the same Up/Down direction and choices "wrap around" to the other end of the range.  
If accessing de-regulated band 863.125 - 864.875 MHz then RF power should be assigned to "RF Low"

**Table 2. UniPak Transmitter Functions**

<b>Handheld Transmitter Functions</b>			
Function Menu	Default Value	Choices (Edit) ▲▼	Wrap-around*
▲▼ Frequency	Lowest in band	Approximately 200 discrete frequencies	Yes
▲▼ RF Power	<i>RF LOW</i>	<i>RF LOW RF HI</i>	Yes
▲▼ Audio Input Level			
Dynamic	<i>+6 dB</i>	<i>-6 dB 0 dB +6 dB +12dB</i>	No
Condenser**	<i>+6 dB</i>	<i>0 dB +6 dB +12dB</i>	No
▲▼ Power/Mute Locks	<i>NO.LOC</i>	<i>NO.LOC ALL.LOC MUT.LOC PWR.LOC</i>	Yes
▲▼ Preset Configurations	<i>PRESET</i>	<i>LOAD STORE</i>	Yes
▲▼ <i>LOAD:</i>	<i>DEF</i>	<i>DEF</i> (default), <i>PRSET1</i> through <i>PRSET5</i>	Yes
▲▼ <i>STORE:</i>	<i>PRSET1</i>	<i>PRSET1</i> through <i>PRSET5</i>	Yes
▲▼ Quit (exit Menu)	<i>QUIT</i>	Press Set once to exit	--

\* Continue in the same Up/Down direction and choices "wrap around" to the other end of the range.  
\*\* Additional 6 dB pad switch on capsule.  
If accessing de-regulated band 863.125 - 864.875 MHz then RF power should be assigned to "RF Low".

**Table 3. Handheld Transmitter Functions**

## Transmitter Setup

### Battery Selection and Installation

Each transmitter uses two 1.5V AA batteries, not included. Alkaline type is recommended. Always replace both batteries. **Make certain the transmitter power is Off before replacing batteries.**

### UniPak™ Transmitter Battery Installation

1. Open the battery compartment door by sliding the catch down (Figure L). (If no batteries are inside, the door will not spring open by itself.)
2. **Observe correct polarity as marked on the metal contacts on the door** and carefully insert two fresh 1.5V AA alkaline batteries (Figure M).
3. Close the door, making certain the latch clicks securely in place.

Figure L

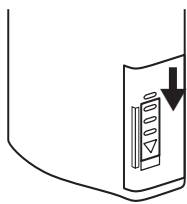


Figure M

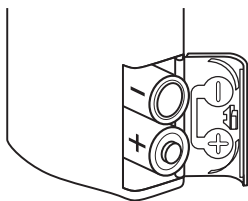


Figure N

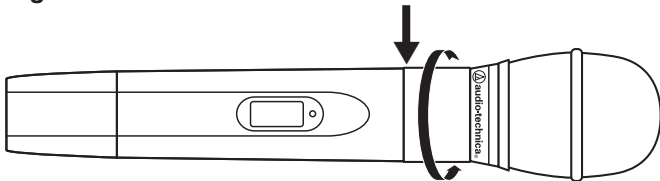


Figure P


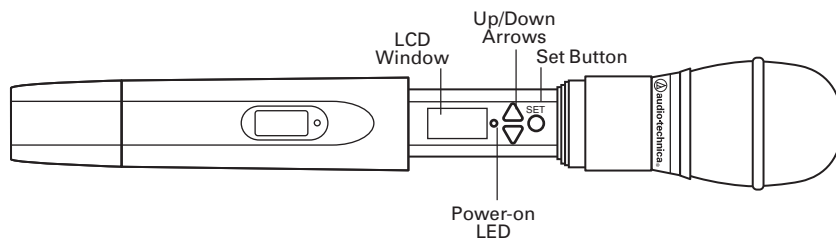


Figure Q

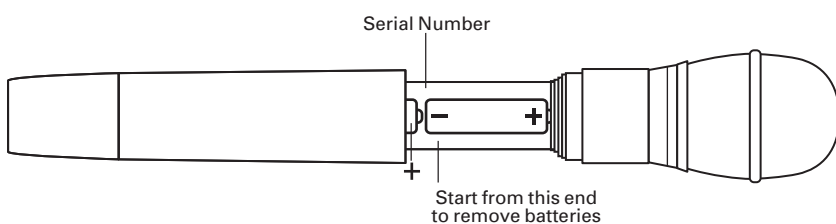

### Handheld Transmitter Battery Installation

1. While holding the lower body cover (near the LCD window), grasp the upper part of the transmitter body just **below** the grille and unscrew it at least four complete turns (Figure N); then slide the lower body cover down until it stops (Figure P). Once the cover has been lowered, turn the transmitter over to reveal the battery compartment on the side opposite the LCD window.
2. **Observe correct polarity as marked inside the battery compartment** and carefully insert two fresh 1.5V AA alkaline batteries (Figure Q). Insert the first battery and slide it down. Then insert the second battery, bottom first, into the space remaining. Make certain the batteries are fully seated in the battery compartment.
3. Slide the lower body cover back up the body, then screw the housing together. **Do not overtighten.**

Note: Remove batteries from the handheld transmitter starting at the **bottom** (- end) of the top battery (Figure Q). The top (+ end) of the top battery is captured in a recess and will not come straight out.

### Battery Condition Indicator

After the batteries are installed, turn the power on by **pressing and holding** the Power/Mute button. The small red power-on LED (see Figure J/K on page 18.) should light and the LCD window should come on. If this does not happen, the batteries are installed incorrectly or they are dead. The transmitter's "fuel gauge" battery indicator displays a maximum of four bar segments. When the LCD flashes "LOW.BAT", the batteries should be replaced immediately to ensure continued operation. (The receiver also displays the transmitter's battery condition in the LCD window with bar segments; the Alert indicator and a flashing "LOW.BAT" come on to warn of a low-battery condition.)

### UniPak Transmitter Input Connection

Connect an audio input device (microphone or guitar cable) to the audio input jack on the bottom of the transmitter. A number of Audio-Technica professional microphones and cables are available separately, pre-terminated with a UniPak input connector (see "Optional System Accessories" on page 28). The cable connector latches automatically when inserted into the transmitter jack. To unlatch and remove the connector, simply pull up on the connector's knurled metal collar.

### UniPak Transmitter Antenna

The AEW-T1000 transmitter includes two field-replaceable antennas. A flexible-wire antenna is supplied mounted on the transmitter, while a separate short, helical antenna is supplied with the accessories. Either antenna simply screws into the transmitter's antenna fitting. Check the installed antenna occasionally to make certain it is snugly attached (only finger-tight). The helical antenna is more convenient physically but may not have the operating range of the wire antenna. The wire antenna should hang down, at its full length, from the bottom of the transmitter. If the received signal is marginal, experiment with different transmitter positions on your body or instrument; try the wire antenna; or try repositioning the receiver. ***Do not attempt to modify either transmitting antenna. Replace them only with the same parts,*** available from the Audio-Technica Service Department.

### Handheld Transmitter Antenna

The antenna for the handheld mic/transmitter is in the black, non-metallic section at the bottom of the unit (see Figure K on page 18). For best results, hold the mic/transmitter naturally, around its painted metal case. Holding or otherwise covering the antenna housing may reduce operating range.

### UniPak Transmitter Mounting Clip

The UniPak transmitter's mounting clip may be installed with the case positioned either "up" or "down," depending upon which is preferred for the particular application. To turn the clip around, spring the ends of the clip out of the two holes on the sides of the transmitter case (see Figure J on page 18) and reinstall it facing in the opposite direction.

## System Operation

Artist Elite wireless receivers and transmitters are extremely versatile components with many operating features and functions, some of which are not obvious. As a result, we suggest the following approaches to assure a "comfort level" with any new equipment:

1. Begin using a single receiver/transmitter pair at their Default ("DEF") settings, to become familiar with equipment functions and operation before doing any customizing. (If the Default frequency is not usable in your area, change the frequency to one that is suitable.)
2. Before installing/starting up a large multi-channel system, explore the functions and operation of only two or three receiver/transmitter pairs together.

The details of setting up and operating a multi-channel system vary greatly in complexity, depending upon the number of receivers and nature of the system. Because the feature-rich nature of AEW units can greatly increase this complexity, we suggest starting with a simpler, straightforward setup and use to become familiar with the equipment and its capabilities.

### Single AEW-R4100 receiver system:

Begin using a receiver and transmitter at their Default ("DEF") settings, to become familiar with equipment functions and operation before doing any customizing. (If the Default frequency is not usable in your area, manually change only the frequency to one that is suitable, as described on page 25.)

### Single AEW-R5200 receiver system (two channels):

Start out using only Channel 1, treating this the same as the single AEW-R4100 above.

### Multiple-receiver system with link cables only:

The link cables provide data and control between receivers. The IntelliScan™ feature scans for clear channels and assigns non-conflicting frequencies to all linked receivers. (If IntelliScan is not used, the receiver frequencies may all be set individually/manually, as with any standard receiver, using the multi-channel information on page 30.)

### Multiple-receiver system with Ethernet-connected computer interface:

Refer to the separate AEW Control Interface manual for setup and operation of a computer-based system. Basic hardware aspects of the receivers, and all transmitter setup/operating information, are in the manual you are now reading.

### Basic Operation – Single AEW-R4100 receiver system:

Turn down the AF Level of the mixer or amplifier. Switch on the receiver. Do *not* switch on the transmitter yet.

### Turning on the Receiver

The Alert indicator and the LCD window lights up; the normal operation LCD display appears after 1–2 seconds. If any of the bars show in the "RF" bar-graph meters, there may be RF interference in the area. If this occurs, select another frequency as explained below. (If the Meter Hold function has been selected, one of the RF bars in each column will be flashing, indicating the lowest RF levels received.)

### Selecting/Setting Receiver Frequency

Selection of the desired operating frequency is made through the function menus. There must be no local interference on that frequency. If the Default frequency (lowest in band) happens not to be usable, the receiver frequency may be set manually by using the frequency charts starting on page 29, or by using the IntelliScan function.

- **Manual frequency selection:** Adjust the receiver frequency as detailed in the next section.
- **IntelliScan frequency selection:** The receiver's IntelliScan function may be employed to select a usable operating frequency automatically, as detailed in the section following on page 25.

Note: Once the receiver frequency is set, the associated **transmitter** must be set manually to the receiver's **exact** frequency. See page 26 for the correct procedure.

### Setting Receiver Frequency Manually

**Touch:** A momentary press of the Mode/Set button. It is used to enter Menu mode, to enter Edit mode, or to Escape without making any changes to current settings.

**Hold:** A press and hold (about two seconds) of the Mode/Set button. It is used to accept a new setting when the receiver is in Edit mode or to save the current settings to one of the five user-defined name presets or the internal memory location ("NAME?").

1. **Touch** the Mode/Set button once. "FRQ." appears on the first line of the LCD window with the current frequency setting on the second line. (The receiver is now in Menu mode.)
2. **Touch** the Mode/Set button again. The small flashing word "EDIT" appears at the bottom of the window. (The receiver is now in Edit mode.)
3. Use the Up/Down arrow buttons to change the frequency. **Touch** either arrow for single steps, or **hold** either arrow for rapid cycling through the band. Frequencies "wrap around" to the other end of the range when the top or bottom of the band is reached. Choose a frequency appropriate for your area, avoiding frequencies with active TV channels. (See the frequency listings from page 29.)

Note: The top line of the LCD indicates when frequencies belong to multi-frequency groups. Asterisks (\*) are displayed in front of "FRQ" to indicate membership in one of more of the three groups (Figure R on page 25). See page 34 for frequency group listings.


4. To choose this frequency, **hold** the Mode/Set button until the word "STORED" appears in the receiver's window. (If you do not wish to complete this selection, **touch** the Mode/Set button **once**. The word "ESCAPE" appears briefly in the window, and the receiver returns to Menu mode.)
5. When finished entering a frequency, **touch** the Up arrow button **once**. The display reads "QUIT."

There are several ways to quit, depending on whether the current Name is to be retained or the frequency stored to a user preset. See page 14 for help with Quitting and saving changes.

To quickly store the new frequency into the "NAME?" location, **touch** the Mode/Set button. The receiver shows "NAME?" in the top line and the new frequency in the bottom line.

**Note:** You must now set the transmitter to the exact same frequency for the system to operate!

Figure R

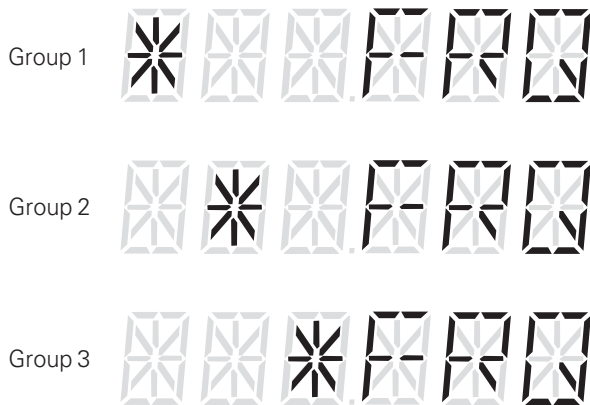

Note: An asterisk in two or more locations indicates this frequency is in more than one group.

**Setting Receiver Frequency Using IntelliScan**

**Single-receiver systems (either an AEW-R4100 or an AEW-R5200):**

Turn down the AF level of the associated mixer or amplifier.

Make certain that any AEW transmitters are turned *off*. (Other RF-generating devices in the area should be turned *on*, if possible.)

1. **Touch** the Mode/Set button once to enter the Menu mode. (On an AEW-R5200, use Channel 1 to perform the IntelliScan for both channels.)
2. **Touch** the Down arrow once. The display shows "SCAN."
3. **Hold** the Mode/Set button to start the scan. The second line displays "—" during the scan and then briefly displays "SCAN OK" when the scan is successfully completed.
4. The display on the receiver then shows "RESET NAMES." The receiver remains in this state (system is muted) until one of the following steps is completed:
  - a. To accept and use this frequency with the currently loaded/named preset, **touch** the Mode/Set button. The LCD briefly displays "STORED" and reverts to normal operation. At this point, the display shows the receiver name/preset currently loaded. (Note: This frequency is now stored with the associated named preset and is recalled when that preset is reloaded.)
  - b. To accept and use this frequency and store it in the special "NAME?" location, **hold** the Mode/Set button. The LCD displays "NAME?" on the top line. (Note: Doing this allows a new frequency to be used without affecting previously stored preset data. However, the receiver shows "NAME?" instead of the preset's name.)  
To store this frequency along with other settings into one of the user presets, refer to the instructions on page 15.

**IMPORTANT!** If one of the above steps is not completed, the receiver will remain in the "RESET NAMES" state indefinitely (system is muted), and it will *not* automatically back out to normal operating mode.

**Multiple-receiver systems:**

Turn down the AF level of the associated mixer or amplifier. Make certain that any AEW transmitters are turned *off*. (Other RF-generating devices in the area should be turned *on*, if possible.)

1. Make certain all the receivers are connected (daisy-chained) with link cables. The receiver with only a Link In (no Link Out connection) becomes the Master receiver. (See "Link connections" on page 9.)
2. Switch on *all* the slave receivers first; switch on the Master receiver *last*. Alternatively, all receivers can be turned on *simultaneously*, as when using AC power plug strips controlled by a single AC switch. (If an AC power or link connection is interrupted, even briefly, *all* receivers must be turned off and the power-up sequence repeated to assure complete system control.)
3. Using controls on the Master receiver, follow all the steps listed for single-receiver systems to assign compatible frequencies for all receivers by using IntelliScan.
4. The display on the Master shows "RESET NAMES", and the display on each slave shows "SCAN" and the new frequency. The receivers remain in this state (system is muted) until one of the following steps is completed to accept the new frequency plan:
  - a. To accept and use this frequency plan with the currently loaded/named presets, **touch** the Mode/Set button. If a user preset was previously loaded on the receiver, the LCD briefly displays "STORED" and reverts to normal operation. The LCD then displays the previously loaded user preset or receiver name and the new frequency. (Note: This frequency is now stored with the associated named preset and is recalled when that preset is reloaded.) If no user preset was loaded (i.e., the default settings were in effect), the LCD shows "NAME?" and the new frequency.
  - b. To accept and use this frequency *and* store it in the special "NAME?" location, **hold** the Mode/Set button. The LCD displays "NAME?" on the top line. (Note: Doing this allows a new frequency to be used without affecting previously stored preset data. However, the receiver shows "NAME?" instead of the preset's name.)

To store this frequency along with other settings into one of the user presets, refer to the instructions on page 15.

**Note:** These changes affect *all linked receivers*.

**IMPORTANT!** If one of the above steps is not completed, the Master and all linked slave receivers will remain in the "RESET NAMES" state indefinitely (system is muted) and will *not* automatically back out to normal operating mode.

**Note:** A "SCAN ERROR" message may be attributable to one or more of the following:

- The link connection was broken somewhere in the chain.
- The power to one or more of the linked receivers was turned off.
- Not enough available frequencies existed for IntelliScan to assign all receivers a frequency.

If IntelliScan cannot locate enough available frequencies, it will set as many as it can on the linked receivers.



### Turning on the Transmitter

Turn on the transmitter by **holding** the Power/Mute button (see Figure J/K on page 18) for a second or two, until the red power indicator and the LCD window have come on. (When using a handheld transmitter, unscrew and slide down the lower body cover, as shown in Figures N/P on page 22.)

### Setting Transmitter Frequency

**Touch:** A momentary press of the Mode/Set button. It is used to enter Menu mode, to enter Edit mode, or to Escape without making any changes to current settings.

**Hold:** A press and hold (about two seconds) of the Mode/Set button. It is used to accept a new setting when the receiver is in Edit mode or to save the current settings to one of the five user-defined name presets or the internal memory location ("NAME?").

1. **Touch** the Set button once. The small word "*MENU*" appears above the frequency. **Touch** the Set button again and the small **flashing** word "*EDIT*" appears to the right of "*MENU*." (The actual frequency flashes twice, then "*EDIT*" continues to flash.)
2. Use the Up/Down arrow buttons to change the transmitter frequency. **Touch** either arrow for single steps, or hold down either arrow for rapid cycling through the range. Frequencies "wrap around" when the top or bottom of the band is reached. Select the **exact** frequency displayed on the receiver.
3. To activate this frequency selection, **hold** the Set button until the word "*STORED*" appears in the transmitter's window. (If you do not wish to complete this selection, just **touch** the Set button **once**: the word "*ESCAPE*" appears briefly in the window, and the transmitter returns to the Menu mode.)
4. When finished entering a frequency, **touch** the Up arrow button **once** to move to "*QUIT*." Then **touch** the Set button **once** to exit the menu. The word "*MENU*" in the transmitter window disappears, indicating the return to normal operation.
5. If desired, assign a standard or custom Preset Name at this time as described on page 20 (To store Preset configurations), so this particular configuration can be recalled in the future. If a new name is not assigned, the transmitter will continue to operate on this frequency (and with these settings) until some other change in settings is made.

When the transmitter is switched on and in normal operation, the receiver's two "*RF*" signal-level bar meters will display from bottom to top, with more bars indicating increased signal reception. For optimum performance, at least four bars, and preferably five or more bars, on at least one of the RF indicators should be displayed at all times.

### Setting Levels

Correct adjustment of transmitter audio input, receiver audio output, and mixer/amplifier input and output levels is important for optimum system performance.

#### Setting Transmitter Audio Input Level

Multiple-position audio input gain settings, selected through the function menu, serve to match the audio input level to the transmitter for best modulation and highest signal-to-noise ratio with minimum distortion.

Select the highest setting that does not result in over-modulation with the highest audio/instrument input levels (an AF indication on the receiver no higher than "+3"); watch the receiver's "*AF*" bar-graph "+6" indication and the Alert light to make certain that they are not triggered by the highest audio levels.

Also, the transmitter's red LED power indicator, which is on during normal operation, will blink **off** if the peak audio input reaches overload level.

#### Available Level Settings

**AEW-T1000 UniPak™:** Choices are +12 dB to -6 dB in -2 dB steps. The default setting is +6 dB.

**AEW-T4100/6100 Dynamic Handhelds:** Choices are +12 dB, +6 dB, 0 dB and -6 dB. The default setting is +6 dB.

**AEW-T3300/5400 Condenser Handhelds:** Choices are +12 dB, +6 dB and 0 dB. The default setting is +6 dB. A mechanical switch on the condenser capsule activates a 6 dB pad. For best performance, adjust the input level using the function menu choices first, keeping the capsule's pad switch at 0 dB. If more audio attenuation is needed, set the capsule's switch to -6 dB.

#### RF Power Adjustment

RF power may be set to "*RF HI*" (35 mW nominal) or "*RF LOW*" (10 mW nominal) through the function menu. The default setting is "*RF LOW*." While the Hi setting normally provides maximum operating range, the Low setting will help extend battery life. The Low setting may also be preferred when using multi-channel systems, or when operating very close to the receiver, to reduce the possibility of interference or overload.

EU Regulations require handheld transmitter operation to be set at "RF Low" 10 mW nominal. In addition, body pack devices when accessing the de-regulated band 863.125-864.875 MHz must also be set to "RF Low" 10 mW nominal.

#### RF Interference

Wireless microphone operations are unprotected from interference from other licensed operations in the band. If any interference is received by any Government or non-Government operation, the wireless microphone must cease operation.

If you need assistance with operation or frequency selection, please contact your dealer or the Audio-Technica professional division. Extensive information on using wireless microphones is also available on the Audio-Technica Web site at [www.audio-technica.com](http://www.audio-technica.com).

## Specifications†

### OVERALL SYSTEM

UHF Operating Frequency	Refer to the frequency band list below*
Number of Channels	Approx. 200 total
Frequency Stability	±0.005%, Phase Lock Loop frequency control
Modulation Mode	FM
Normal Deviation	±5 kHz
Operating Range	90m typical
Operating Temperature Range	5° C to 45° C
Frequency Response	70 Hz to 15 kHz

### AEW-R4100 & AEW-R5200 RECEIVERS

Receiving System	Dual independent RF sections, automatic-switching diversity
Image Rejection	60 dB typical
Signal-to-noise Ratio	115 dB at 40 kHz deviation IEC-weighted, 1kHz modulation
Total Harmonic Distortion	≤1% (10 kHz deviation at 1 kHz)
Sensitivity	20 dBµV (S/N 60 dB at 5 kHz deviation, IEC-weighted)
Intermediate Frequency	65.75 MHz, 10.7 MHz
Audio Output (ATTN switch at "0")	
Microphone	25 mV (at 1 kHz, ±5 kHz deviation, 10k ohm load)
Instrument	50 mV (at 1 kHz, ±5 kHz deviation, 10k ohm load)
	AEW-R5200: Both outputs are transformer isolated and balanced
Audio Output Attenuator (ATTN)	Three-position switch: 0 / -6 / -12 dB
Output Connectors	
Microphone	XLRM-type
Instrument	
AEW-R4100	1/4" (6.3 mm) TS unbalanced phone jack
AEW-R5200	1/4" (6.3 mm) TRS balanced phone jack
Headphone Output	
Connector	1/4" (6.3 mm) TRS ("stereo") phone jack
Power Output	10 mW + 10 mW at 1 kHz, ±5 kHz deviation into 32 ohms; maximum output, 220 mW + 220 mW into 32 ohms. AEW-R5200: Headphones switchable between Channel 1 and Channel 2
External Mute (AEW-R5200)	1/4" (6.3 mm) TS unbalanced phone jack, each channel
Antenna Terminal Voltage	DC 10V-12V, 20 mA (BNC-type jack)
Computer Interface (AEW-R5200)	
Type	Ethernet, 10 BaseT mode
Connector	RJ-45
Proprietary Software	Supplied on CD-ROM
Power Supply	
AEW-R4100	100–240V AC 50/60 Hz, 8W
AEW-R5200	100–240V AC 50/60 Hz, 15W
Pass-through AC Power Outlet (AEW-R5200)	100–240V AC 50/60 Hz, 5A maximum
Dimensions	
AEW-R4100	211.0 mm W x 44.0 mm H x 235.0 mm D
AEW-R5200	482.0 mm W x 44.0 mm H x 275.5 mm D
Net Weight (without accessories)	
AEW-R4100	1.7 kg
AEW-R5200	4.0 kg
Accessories Included	
Both receivers	IEC-type AC power cable; two flexible UHF half-wave antennas; link cable
AEW-R4100	Rack-mount adapters
AEW-R5200	IEC-type AC pass-through cable; front-mount antenna cables and connectors; CD-ROM with computer control interface software; AEW-TB44 transmitter bag

### ATW-T1000 UNIPAK™ TRANSMITTER

RF Power Output	High: 35 mW; Low: 10 mW, nominal
-----------------	----------------------------------

Spurious Emissions	According to R & TTE Directive
Dynamic Range	
Microphone	≥110 dB, A-weighted
Instrument	≥100 dB, A-weighted
Input Connections	High impedance, low impedance, bias
Batteries (not included)	Two 1.5V AA alkaline
Current Consumption	High: 185 mA; Low: 165 mA, typical
Battery Life	Approximately 6 hours (High); 8 hours (Low), depending on battery type and use pattern
Dimensions	66.0 mm W x 87.0 mm H x 24.0 mm D ;not including antenna
Net Weight (without batteries)	125 g
Accessory Included	Helical antenna

### HANDHELD TRANSMITTER

RF Power Output	High: 35 mW; Low: 10 mW, nominal
Spurious Emissions	According to R & TTE Directive
Dynamic Range	≥110 dB, A-weighted
Microphone Element	
AEW-T3300	Cardioid Condenser
AEW-T4100	Cardioid Dynamic
AEW-T5400	Cardioid Condenser
AEW-T6100	Hypercardioid Dynamic
Batteries (not included)	Two 1.5V AA alkaline
Current Consumption	High: 185 mA; Low: 165 mA, typical
Battery Life	Approximately 6 hours (High); 8 hours (Low), depending on battery type and use pattern
Dimensions	
AEW-T3300, AEW-T5400	239.0 mm long, 50.0 mm diameter
AEW-T4100, AEW-T6100	237.0 mm long, 48.0 mm diameter
Net Weight (without batteries)	
AEW-T3300	270 g
AEW-T4100	276 g
AEW-T5400	285 g
AEW-T6100	275 g
Accessory Included	AT8456a stand clamp; Screw adapter

† In the interest of standards development, A.T.U.S. offers full details on its test methods to other industry professionals on request. Specifications are subject to change without notice.

The systems can be supplied in five frequency bands within the UHF range.

Please note: Frequency usage is different for each country. Your Audio-Technica agent will have all the necessary details on the available legal frequencies for your area.

Band C: 541.500 - 566.375 MHz

Band D: 655.500 - 680.375 MHz

Band E: 795.500 - 820.000 MHz

Band F: 840.125 - 864.875 MHz

## Optional System Accessories

### WIRELESS ESSENTIALS™ MICROPHONES AND CABLES

All Wireless Essentials accessories are terminated for use with AEW-T1000 and other UniPak™ transmitters.

AT829cW	Miniature cardioid condenser lavalier microphone. Includes clothing clip and windscreen.
MT830cW	Subminiature omnidirectional condenser lavalier microphone. Includes clothing clip and windscreen.
MT830cW-TH	"Theater" model, same as MT830cW except beige color mic and cable for concealment.
AT831cW	Miniature cardioid condenser lavalier microphone. Includes clothing clip and windscreen.
AT851cW	Surface-mount wide-range hemi-cardioid condenser microphone.
AT857AMLcW	19" gooseneck cardioid microphone. Mounts to 5/8"-27 thread. Includes windscreen.
AT889cW	Headworn noise-canceling condenser microphone. Includes windscreen and cable clip.
AT899cW	Subminiature omnidirectional condenser lavalier microphone. Includes AT899AK accessory kit.
AT899cW-TH	"Theater" model, same as AT899cW except beige color mic and cable for concealment. Includes AT899AK-TH accessory kit.
ATM35cW	Cardioid condenser instrument microphone. Includes AT8418 clip-on instrument mount.
ATM73cW	Headworn cardioid condenser microphone. Includes windscreen.
ATM75cW	Headworn cardioid condenser microphone. Includes windscreen.
PRO 8HEcW	Headworn hypercardioid dynamic microphone. Includes windscreen and cable clip.
PRO 35xcW	Cardioid condenser instrument microphone. Includes AT8418 clip-on instrument mount.
AT8319	Hi-Z instrument/guitar cable with 1/4" phone plug.
AT8317	Connecting cable for UniPak transmitter with an XLR-type input connector, for Lo-Z microphones with XLRM-type output terminations.

### RECEIVER ACCESSORIES

AT8628b	Joining-plate kit allows rack-mounting two AEW-R4100 receivers side-by-side in a single (1U) 19" rack space.
ATW-A20	Pair of UHF ground-plane antennas with 5/8"-27 thread for mounting to microphone stands, etc. Takes RF cables with BNC connectors, not included; see RF Cables below.
AEW-DA860UK	UHF (840-865 MHz) active unity-gain antenna distribution system provides two "1-in, 4-out" RF channels; connects a pair of antennas to as many as four diversity receivers. A cascade output is provided as a directional coupler to drive additional distribution amps. Includes four DC interconnect cables to power up to four receivers, eight RF output cables and two rack-mount adapters. Mounts in a single (1U) 19" rack space.
AEW-DA600D	As AEW-DA860UK above but UHF 656-680 MHz
AEW-DA800EU	As AEW-DA860UK above but UHF 795-820 MHz
ATW-A49	Wide Band Paddle Antenna 440-900 MHz
RF Cables	Low-loss design, 50 ohm impedance, with BNC-to-BNC connectors: AC12   RG58-type cable (12') AC25   RG8-type cable (25') AC50   RG8-type cable (50') AC100  RG8-type cable (100')

### TRANSMITTER ACCESSORIES

AEW-TB44	Transmitter bag, fits four AEW handheld and four AEW body-pack transmitters. Included with 5000 Series systems.
AT8114	Foam windscreen for handheld transmitter.
AT8141	Water-resistant pouch for UniPak transmitter.
AT8390	Shielded audio cable with 1/4" to 1/4" phone plugs. Available in a variety of lengths. (Also available with one straight and one 90° phone plug as the AT8316.)
AT8456a	Stand clamp for handheld transmitter, 5/8"-27 threads.

# Artist Elite Series UHF Wireless Operating Frequencies

TV Ch.	Band C : 541.500 - 566.375 MHz							
29	541.500	541.625	541.750	541.875	542.000	542.125	542.250	542.375
29	542.500	542.625	542.750	542.875	~	~	~	~
30	543.000	543.125	543.250	543.375	543.500	543.625	543.750	543.875
30	544.000	544.125	544.250	544.375	544.500	544.625	544.750	544.875
30	545.000	545.125	545.250	545.375	545.500	545.625	545.750	545.875
30	546.000	546.125	546.250	546.375	546.500	546.625	546.750	546.875
30	547.000	547.125	547.250	547.375	547.500	547.625	547.750	547.875
30	548.000	548.125	548.250	548.375	548.500	548.625	548.750	548.875
30	549.000	549.125	549.250	549.375	549.500	549.625	549.750	549.875
31	550.000	550.125	550.250	550.375	550.500	550.625	550.750	550.875
31	551.000	551.125	551.250	551.375	551.500	551.625	551.750	551.875
31	552.000	552.125	552.250	552.375	552.500	552.625	552.750	552.875
31	553.000	553.125	553.250	553.375	553.500	553.625	553.750	553.875
31	554.000	554.125	554.250	554.375	554.500	554.625	554.750	554.875
31	555.000	555.125	555.250	555.375	555.500	555.625	555.750	555.875
31	556.000	556.125	556.250	556.375	556.500	556.625	556.750	556.875
31	557.000	557.125	557.250	557.375	557.500	557.625	557.750	557.875
32	558.000	558.125	558.250	558.375	558.500	558.625	558.750	558.875
32	559.000	559.125	559.250	559.375	559.500	559.625	559.750	559.875
32	560.000	560.125	560.250	560.375	560.500	560.625	560.750	560.875
32	561.000	561.125	561.250	561.375	561.500	561.625	561.750	561.875
32	562.000	562.125	562.250	562.375	562.500	562.625	562.750	562.875
32	563.000	563.125	563.250	563.375	563.500	563.625	563.750	563.875
32	564.000	564.125	564.250	564.375	564.500	564.625	564.750	564.875
32	565.000	565.125	565.250	565.375	565.500	565.625	565.750	565.875
33	566.000	566.125	566.250	566.375	~	~	~	~

# Artist Elite Series UHF Wireless Operating Frequencies

TV Ch.	Band D: 655.500 - 680.375 MHz							
44	---	---	---	---	655.500	655.625	655.750	655.875
45	656.000	656.125	656.250	656.375	656.500	656.625	656.750	656.875
45	657.000	657.125	657.250	657.375	657.500	657.625	657.750	657.875
45	658.000	658.125	658.250	658.375	658.500	658.625	658.750	658.875
45	659.000	659.125	659.250	659.375	659.500	659.625	659.750	659.875
45	660.000	660.125	660.250	660.375	660.500	660.625	660.750	660.875
45	661.000	661.125	661.250	661.375	661.500	661.625	661.750	661.875
46	662.000	662.125	662.250	662.375	662.500	662.625	662.750	662.875
46	663.000	663.125	663.250	663.375	663.500	663.625	663.750	663.875
46	664.000	664.125	664.250	664.375	664.500	664.625	664.750	664.875
46	665.000	665.125	665.250	665.375	665.500	665.625	665.750	665.875
46	666.000	666.125	666.250	666.375	666.500	666.625	666.750	666.875
46	667.000	667.125	667.250	667.375	667.500	667.625	667.750	667.875
47	668.000	668.125	668.250	668.375	668.500	668.625	668.750	668.875
47	669.000	669.125	669.250	669.375	669.500	669.625	669.750	669.875
47	670.000	670.125	670.250	670.375	670.500	670.625	670.750	670.875
47	671.000	671.125	671.250	671.375	671.500	671.625	671.750	671.875
47	672.000	672.125	672.250	672.375	672.500	672.625	672.750	672.875
47	673.000	673.125	673.250	673.375	673.500	673.625	673.750	673.875
48	674.000	674.125	674.250	674.375	674.500	674.625	674.750	674.875
48	675.000	675.125	675.250	675.375	675.500	675.625	675.750	675.875
48	676.000	676.125	676.250	676.375	676.500	676.625	676.750	676.875
48	677.000	677.125	677.250	677.375	677.500	677.625	677.750	677.875
48	678.000	678.125	678.250	678.375	678.500	678.625	678.750	678.875
48	679.000	679.125	679.250	679.375	679.500	679.625	679.750	679.875
49	680.000	680.125	680.250	680.375	---	---	---	---

# Artist Elite Series UHF Wireless Operating Frequencies

TV Ch.	Band E : 795.500 - 820.000 MHz							
61	795.500	795.750	796.000	796.250	796.500	796.700	796.900	797.100
61	797.300	797.500	797.700	797.900	~	~	~	~
62	798.100	798.300	798.500	798.750	798.850	798.875	798.900	798.925
62	798.950	799.000	799.250	799.400	799.450	799.475	799.500	799.750
62	800.025	800.225	800.500	800.525	800.550	800.575	800.600	800.625
62	800.650	800.775	800.975	801.100	801.125	801.150	801.175	801.200
62	801.225	801.250	801.425	801.450	801.475	801.500	801.750	801.925
62	801.975	802.000	802.025	802.075	802.200	802.225	802.250	802.325
62	802.500	802.575	802.775	802.975	803.025	803.050	803.075	803.250
62	803.500	803.550	803.575	803.600	803.625	803.700	803.750	804.000
62	804.250	804.500	804.825	804.900	805.075	805.150	805.200	805.300
62	805.700	805.775	~	~	~	~	~	~
63	806.925	807.450	807.500	808.500	808.550	808.575	808.600	808.625
63	808.650	809.125	809.500	809.750	809.925	809.950	809.975	810.000
63	810.025	810.075	810.200	810.225	810.325	810.500	810.550	810.575
63	810.975	811.100	811.500	811.550	811.575	811.600	811.700	811.750
63	812.000	812.250	812.500	812.775	812.800	812.825	812.850	812.900
63	813.075	813.100	813.125	813.200	813.300	813.500	813.700	813.750
63	813.775	813.800	813.900	~	~	~	~	~
64	814.100	814.300	814.500	814.750	814.850	~	~	~
64	814.875	814.900	814.925	814.950	815.000	815.250	815.400	815.425
64	815.450	815.475	815.500	815.750	816.025	816.225	816.500	816.525
64	816.550	816.575	816.600	816.625	816.650	816.775	816.975	817.100
64	817.125	817.175	817.200	817.225	817.250	817.425	817.450	817.475
64	817.500	817.750	817.925	817.950	817.975	818.000	818.025	818.075
64	818.200	818.225	818.325	818.500	818.575	818.775	818.975	819.025
64	819.050	819.075	819.250	819.500	819.550	819.575	819.600	819.700
64	819.750	820.000	~	~	~	~	~	~

# Artist Elite Series UHF Wireless Operating Frequencies

TV Ch.	Band F: 840.125 - 864.875 MHz							
67	840.125	840.250	840.375	840.500	840.625	840.750	840.875	841.000
67	841.125	841.250	841.375	841.500	841.625	841.750	841.875	842.000
67	842.125	842.250	842.375	842.500	842.625	842.750	842.875	843.000
67	843.125	843.250	843.375	843.500	843.625	843.750	843.875	844.000
67	844.125	844.250	844.375	844.500	844.625	844.750	844.875	845.000
67	845.125	845.250	845.375	845.500	845.625	845.750	845.875	~
68	~	~	~	~	~	~	~	846.000
68	846.125	846.250	846.375	846.500	846.625	846.750	846.875	847.000
68	847.125	847.250	847.375	847.500	847.625	847.750	847.875	848.000
68	848.125	848.250	848.375	848.500	848.625	848.750	848.875	849.000
68	849.125	849.250	849.375	849.500	849.625	849.750	849.875	850.000
68	850.125	850.250	850.375	850.500	850.625	850.750	850.875	851.000
68	851.125	851.250	851.375	851.500	851.625	851.750	851.875	852.000
68	852.125	852.250	852.375	852.500	852.625	852.750	852.875	853.000
68	853.125	853.250	853.375	853.500	853.625	853.750	853.875	~
69	854.375	854.500	854.625	854.750	854.875	854.900	855.000	855.125
69	855.250	855.275	855.375	855.500	855.625	855.750	855.875	855.900
69	856.000	856.125	856.175	856.250	856.375	856.500	856.575	856.625
69	856.750	856.875	857.000	857.125	857.250	857.375	857.500	857.625
69	857.750	857.875	857.950	858.000	858.125	858.200	858.250	858.375
69	858.500	858.625	858.650	858.750	858.875	859.000	859.125	859.250
69	859.375	859.500	859.625	859.750	859.875	860.000	860.125	860.250
69	860.375	860.400	860.500	860.625	860.750	860.875	860.900	861.000
69	861.125	861.200	861.250	861.375	861.500	861.550	861.625	861.750
de reg	863.125	863.250	863.375	863.500	863.625	863.750	863.875	864.000
de reg	864.125	864.250	864.375	864.500	864.625	864.750	864.875	~

# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band C: 541.500 - 566.375 MHz (TV Ch. 30-33)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
30	542.750	8	29	541.500	1	29	541.500	
30	543.000		30	542.750	7		~	8
30	545.500		30	543.250		30	542.125	
30	546.000		30	544.375		30	543.250	
30	547.125		30	544.750		30	543.500	
30	547.375		30	545.750		30	544.000	
30	549.500		30	547.500		30	546.250	
30	549.750		30	547.750		30	547.875	
	~			~	30	548.250		
					30	549.750		
31	550.375	4	31	554.250	4			2
31	550.625		31	556.125			~	
31	557.250		31	557.250		31	555.750	
31	557.500		31	557.500		31	556.625	
	~			~		~		
32	558.750	7	32	559.375	7	32	558.250	8
32	559.250		32	560.000		32	559.375	
32	559.500		32	561.875		32	560.125	
32	562.000		32	562.250		32	561.500	
32	562.250		32	563.250		32	562.625	
32	563.375		32	563.500		32	564.000	
32	563.625		32	565.500		32	564.250	
	~			~	32	565.625		
33	566.000	2	33	566.000	1		~	1
33	566.250			~		33	566.125	

Max. = 21

Max. = 20

Max. = 19

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.



# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band D: 655.500 - 680.375 MHz (TV Ch. 44-49)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
44	655.500	1	44	655.875	1	44	655.500	2
	-			-		44	655.750	
45	658.000	6	45	656.250	7	45	656.625	5
45	658.375		45	657.500		45	656.875	
45	659.250		45	658.500		45	658.500	
45	659.500		45	659.750		45	658.750	
45	661.500		45	660.000		45	659.500	
45	661.750		45	660.500			-	
	-		45	661.750			-	
46	662.375	2	46	664.375	2	46	662.750	3
46	662.750		46	665.500		46	663.000	
	-			-		46	665.250	
47	669.625	2	47	671.625	2	47	671.250	3
47	671.750		47	672.000		47	672.375	
	-			-		47	673.125	
48	674.750	8	48	674.000	6	48	674.125	6
48	675.125		48	674.500		48	674.500	
48	675.750		48	675.500		48	675.375	
48	676.125		48	675.750		48	675.625	
48	678.000		48	676.750		48	678.625	
48	678.250		48	678.250		48	679.125	
48	679.000					-		
48	679.500					-		
49	(None)	0	49	680.250	1	49	(None)	0

Max. = 19

Max. = 19

Max. = 19

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.

# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band E: 795.500 - 820.000 MHz (FRANCE) (TV Ch. 61-64)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
61	795.750		61	795.750	4	61	795.000	3
61	796.250		61	796.250		61	795.750	
61	796.500		61	796.500		61	795.500	
		61	797.900					
62	798.500	10		~	7		~	8
62	798.750		62	798.750		62	798.300	
62	799.750		62	799.000		62	798.750	
62	800.225		62	800.500		62	799.750	
62	802.225		62	802.500		62	800.500	
62	802.500		62	802.500		62	802.975	
62	803.500		62	802.775		62	803.250	
	~		62	803.500		62	804.250	
		62	803.750	62	804.500			
63	810.025	4		~	4		~	3
63	812.000		63	810.225		63	811.750	
63	812.500		63	811.500		63	812.000	
63	813.700		63	812.000		63	812.500	
	~				~			
64	814.500	6		~	5	64	814.300	6
64	815.750		64	814.750		64	815.500	
64	816.225		64	815.750		64	815.750	
64	818.225		64	816.225		64	817.500	
64	818.500		64	818.500		64	818.225	
64	819.250		64	818.975		64	820.000	

Max. = 20

Max. = 20

Max. = 20

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.

# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band E: 795.500 - 820.000 MHz (GERMANY) (TV Ch. 62-64)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
62	798.925	7	62	798.900	8	62	798.950	7
62	800.525		62	799.475		62	800.625	
62	801.475		62	801.425		62	801.200	
62	803.025		62	802.025		62	801.450	
62	803.550		62	803.075		62	803.700	
62	804.825		62	803.625		62	804.825	
62	805.150		62	806.925		62	805.075	
	~		62	809.125			~	
63	811.700	3		~	2	63	809.975	3
63	812.825		63	811.575		63	812.800	
63	813.125		63	813.300		63	813.100	
	~			~		~		
64	816.625	6	64	815.425	6	64	816.650	6
64	817.175		64	816.525		64	817.175	
64	817.425		64	817.100		64	817.450	
64	817.975		64	817.925		64	817.975	
64	819.050		64	818.225		64	819.050	
64	819.600		64	819.025		64	819.575	

Max. = 16

Max. = 16

Max. = 16

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.

# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band E: 795.500 - 820.000 MHz (NORDIC) (TV Ch. 62-64)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
62	800.500	8	62	800.225	8	62	801.200	9
62	800.775		62	800.525		62	801.450	
62	801.450		62	801.450		62	802.075	
62	801.750		62	801.975		62	802.325	
62	803.250		62	804.000		62	803.750	
62	804.000		62	804.250		62	804.250	
62	804.500		62	805.200		62	804.500	
62	805.300		62	805.700		62	805.775	
	~		~		62	808.650		
63	811.750	4	63	811.500	4		~	2
63	812.850		63	813.200		63	812.500	
63	813.100		63	813.775		63	813.300	
63	813.700		63	814.100			~	
	~		~		64	815.475	7	
64	816.975	6	64	815.250	6	64		816.975
64	817.250		64	815.500		64		817.250
64	817.925		64	818.075		64		818.200
64	819.250		64	818.325		64		818.775
64	819.750		64	819.250		64		819.700
64	820.000		64	819.750		64		820.000

Max. = 18

Max. = 18

Max. = 18

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.

# Artist Elite Series Wireless Operating Frequencies

## Suggested Frequencies for Multi-channel Systems Operation

Band F: 840.125 - 864.875 MHz (TV Ch. 67-69)

Group 1			Group 2			Group 3		
TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*	TV Ch.	Frequency - MHz	*
67	840.250	6	67	840.625	6	67	840.625	8
67	840.625		67	841.250		67	840.875	
67	841.375		67	842.875		67	841.625	
67	842.750		67	843.125		67	842.875	
67	843.375		67	843.875		67	843.875	
67	844.625		67	844.250		67	844.500	
	~		~		67	845.375		
					67	845.750		
68	847.000	4	68	846.250	6			3
68	847.250		68	846.750			~	
68	848.375		68	847.500		68	846.500	
68	850.125		68	849.000		68	848.875	
	~		68	849.875		68	849.500	
		68	850.125					
69	854.625	7		~	5		~	6
69	854.900		69	857.950		69	855.500	
69	857.125		69	859.375		69	855.750	
69	858.250		69	860.125		69	857.625	
69	858.625		69	861.125		69	858.650	
69	860.400		69	861.750	69	859.000		
69	861.125		69	861.750	69	860.625		
	~		~		~			
de reg	863.125	4	de reg	863.125	4	de reg	863.125	4
de reg	863.375		de reg	863.625		de reg	863.375	
de reg	864.375		de reg	863.875		de reg	863.875	
de reg	864.875		de reg	864.875		de reg	864.125	

Max. = 17 ex de reg

Max. = 17 ex de reg

Max. = 17 ex de reg

For multi-channel systems, use frequencies from Group 1 or Group 2 or Group 3.

\* Number of wireless frequencies in TV Channel.

For licensing information, please contact your dealer or the radio authority in your country.

## DECLARATION of CONFORMITY

We, **Audio-Technica Ltd** of the below address, hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

**Product:** **UHF Wireless Microphone System**

**Model / Type Number:** **AEW R4100**  
**AEW R5200**  
**AEW T3300**  
**AEW T4100**  
**AEW T5400**  
**AEW T6100**  
**AEW T1000**

**Directive and Standards Used:**

<u>Radio</u>	<b>EN 300 422-2 V1.1.1 (2000-08)</b> <b>EN 300 422-1 V1.2.2 (2000-08)</b>
<u>EMC</u>	<b>EN 301 489-9 V.1.3.1 (2002-08)</b> <b>EN 301 489-1 V1.5.1 (2002-08)</b>
<u>LVD</u>	<b>EN 60065: 2002</b>

**Year of Affixing CE marking:** **2003**

**Signature:** 

**Name:** Adrian Rooke

**Position:** Managing Director

**Date:** 20/08/2007

Usage :-

The AEW-3300, AEW-4100, AEW-5400, AEW-6100 and AEW-T1000 are intended to use in AT - BE - BU - CY - CZ - DK - EE - FI - FR - DE - GR - HU - IS - IE - IT - LV - LT - LU - MT - NL - NO - PL - PT - RO - SK - SI - ES - CH - SE - GB.  
Please note : Frequency usage is different for each country. Your Audio-Technica agent will have all the necessary details on the available legal frequencies for your area.

Statement of Compliance:-

**CE 0168** 

Hereby, Audio-Technica, declares that this AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100 and AEW-R5200 are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Audio-Technica vakuuttaa täten että AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Hierbij verklaart Audio-Technica dat het toestel AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG
Bij deze verklaart Audio-Technica dat deze AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.
Par la présente, Audio-Technica déclare que ce AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables
Härmed intygar Audio-Technica att denna AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Undertegnede Audio-Technica erklærer herved, at følgende udstyr AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
Hiermit erklärt Audio-Technica, dass sich dieser/diese/dieses AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW)
Hiermit erklärt Audio-Technica die Übereinstimmung des Gerätes AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Audio-Technica ΔΗΛΩΝΕΙ ΟΤΙ ΑEW-T3300, ΑEW-T4100, ΑEW-T5400, ΑEW-T6100, ΑEW-T1000, ΑEW-R4100, ΑEW-R5200 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ
Con la presente Audio-Technica dichiara che questo AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Por medio de la presente Audio-Technica declara que el AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Audio-Technica declara que este AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Společnost Audio-Technica tímto prohlašuje, že AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 splňuje základní požadavky a další příslušné ustanovení Direktivy 1999/5/EC.
Sellega kinnitab Audio-Technica, et see AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 vastab direktiivi 1999/5/EC põhilistele nõudmistele ja muudele asjakohastele määrustele.
Ar šo, Audio-Technica, apstiprina, ka AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 atbilst Direktīvas 1999/5/EK galvenajām prasībām un citiem tās nosacījumiem.
Šiuo, Audio-Technica, pareiškia, kad šis AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 atitinka pagrindinius Direktyvos 1999/5/EB reikalavimus ir kitas svarbias nuostatas.
Alulírott, Audio-Technica, kijelenti, hogy a jelen AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 megfelel az 1999/5/EC irányelvben meghatározott alapvető követelményeknek és egyéb vonatkozó előírásoknak.
Hawnhekk, Audio-Technica, tiddikjara li AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 josserva l-ħtiġijiet essenzjali u dispożizzjonijiet relevanti oħra tad-Direttiva 1999/5/KE.
Audio-Technica niniejszym oświadcza, że AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 spełnia zasadnicze wymogi oraz inne istotne postanowienia dyrektywy 1999/5/EC.
S tem Audio-Technica izjavlja, da je ta AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 v skladu z osnovnimi zahtevami in ostalimi ustreznimi predpisi Direktive 1999/5/EC.
Spoločnosť Audio-Technica týmto vyhlasuje, že AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 spĺňa základné požiadavky a ďalšie príslušné ustanovenia Direktívy 1999/5/EC.
С настоящия документ Audio-Technica декларира, че AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 е в съгласие с основните изисквания и съответните постановления на Директива 1999/5/EC.
Prin prezenta, Audio-Technica declară că acest AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 este conform cu cerințele principale și cu celelalte prevederi relevante ale Directivei 1999/5/EC.
Íšbu belge ile Audio-Technica, bu AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200'in 1999/5/EC Yönetmeliği esas gereksinimleri ve diğer şartlarına uygun olduğunu beyan eder.
С настоящият документ Audio-Technica декларира, че AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 е в съгласие с основните изисквания и съответните постановления на Директива 1999/5/EC.
Prin prezenta, Audio-Technica, declara ca urmatoarele echipamente AEW-T3300, AEW-T4100, AEW-T5400, AEW-T6100, AEW-T1000, AEW-R4100, AEW-R5200 sunt compatibile cu standardele si prevederile Directivei Europene 1999/5/EC.

A full copy of the declaration of conformity with directive 1999/5/EC may be obtained from –

Audio-Technica Limited  
Old Lane, Leeds, LS11 8AG  
U.K

For future reference, please record your system information here:

**Receivers:**      AEW-R4100      S/N \_\_\_\_\_  
Serial Number appears on the label on the bottom of the receiver.

AEW-R5200      S/N \_\_\_\_\_  
Serial Number appears on the label on the bottom of the receiver.

**Transmitters:**      AEW-T1000      S/N \_\_\_\_\_  
Serial Number appears on the label on the back of the transmitter.

S/N \_\_\_\_\_

AEW-T3300      S/N \_\_\_\_\_  
Serial Number appears in a recess in the battery compartment of the transmitter.

S/N \_\_\_\_\_

AEW-T4100      S/N \_\_\_\_\_  
Serial Number appears in a recess in the battery compartment of the transmitter.

S/N \_\_\_\_\_

AEW-T5400      S/N \_\_\_\_\_  
Serial Number appears in a recess in the battery compartment of the transmitter.

S/N \_\_\_\_\_

AEW-T6100      S/N \_\_\_\_\_  
Serial Number appears in a recess in the battery compartment of the transmitter.

S/N \_\_\_\_\_



## Disclaimer

Audio-Technica operates a policy of continuous development. Audio-Technica reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Audio-Technica be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Audio-Technica reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by country. Please check with the distributor for your territory. In some countries there may be restrictions in using this equipment. Please check with your local radio frequency authorities.

## Two-Years Limited Warranty

Audio-Technica microphones and accessories purchased in the UK and EU / Europe are guaranteed for two years from date of purchase by Audio-Technica Ltd. to be free of defects in materials and workmanship. In the event of such defect, product will be repaired promptly without charge or, at our option, replaced with a new product of equal or superior value, if the faulty product is delivered to Audio-Technica Ltd., prepaid, together with the proof of purchase. Prior approval from Audio-Technica Ltd. is required for return. This warranty excludes defects due to normal wear, abuse, shipping damage, or failure to use product in accordance with instructions. This warranty is void in the event of unauthorized repair or modification.

For return approval and shipping information, contact the Service Department, Audio-Technica Ltd. Tel: +44 (0)113 277 1441.

Outside the U.K, please contact your local dealer for warranty details.

Visit our Web Site!

**[www.audio-technica.com](http://www.audio-technica.com)**



**Audio-Technica Ltd**

Technica House, Royal London Industrial Estate, Old Lane, Leeds LS11 8AG England  
Tel: +44 (0) 113 277 1441 - Fax: +44 (0) 113 270 4836 - Email: [sales@audio-technica.co.uk](mailto:sales@audio-technica.co.uk)

ER0000.0 ©2008 Audio-Technica Ltd, Printed in England.